


Haier SERVICE MANUAL

Wall Mounted Type DC Inverter Model No. AS35S2SJ1FA-3

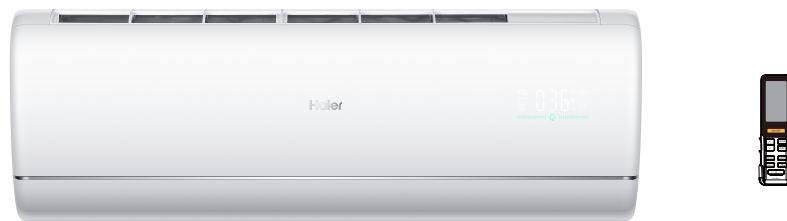

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

2020 (Qingdao Haier Air Conditioner General Corp., Ltd)
All rights reserved. Unauthorized copying and distribution is a violation of law.


Version: V1 Date: 20210122

Contents

1. Introduction.....	1
2. Features	7
3. Specifications	8
4. Sensors list.....	9
5. Piping diagrams.....	10
6. Printed Circuit Board Connector Wiring Diagram.....	11
7. Functions and Control	14
8. Dimensional drawings	25
9. Center of gravity	25
10. Service Diagnosis.....	27
11. Circuit diagrams	43.

1. Introduction

1.1 Model name explanation

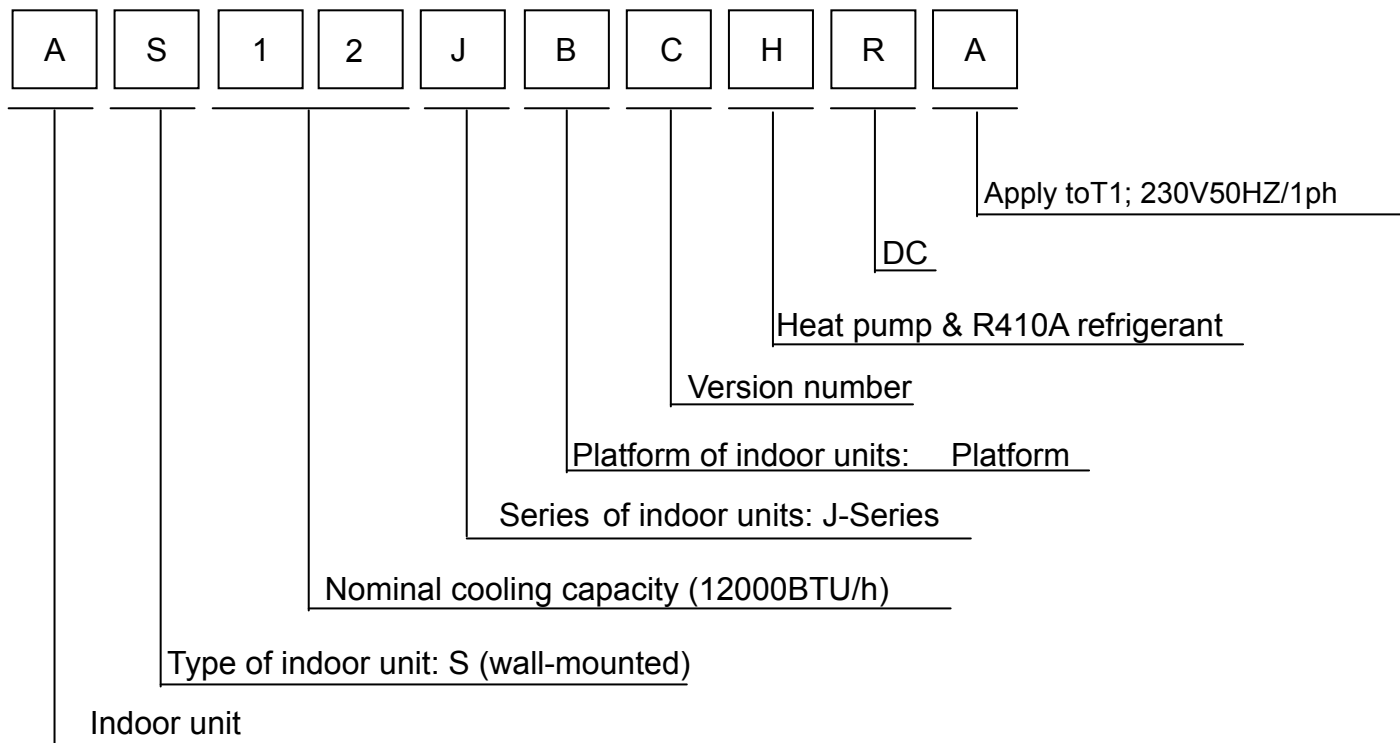

1.2 Safety Cautions

Be sure to read the following safety cautions before conducting repair work.

The caution items are classified into “Warning” and “Caution”. The “Warning” items are especially important since they can lead to death or serious injury if they are not followed closely. The “Caution” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.

About the pictograms

△ This symbol indicates an item for which caution must be exercised.

The pictogram shows the item to which attention must be paid.

○ This symbol indicates a prohibited action.






The prohibited item or action is shown inside or near the symbol.







● This symbol indicates an action that must be taken, or an instruction.

The instruction is shown inside or near the symbol.

After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates Normally, and explain the cautions for operating the product to the customer.



1.2.1 Caution in Repair


Warning	
<p>Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for a repair.</p> <p>Working on the equipment that is connected to a power supply can cause an electrical shock.</p> <p>If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.</p>	
<p>If the refrigerant gas discharges during the repair work, do not touch the discharging refrigerant gas. The refrigerant gas can cause frostbite.</p>	
<p>When disconnecting the suction or discharge pipe of the compressor at the welded section, release the refrigerant gas completely at a well-ventilated place first.</p> <p>If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it can cause injury.</p>	
<p>If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas can generate toxic gases when it contacts flames.</p>	
<p>The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit.</p> <p>Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor can cause an electrical shock.</p>	
<p>Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug.</p> <p>Plugging or unplugging the power cable plug to operate the equipment can cause an electrical shock or fire.</p>	

Warning	
Do not repair the electrical components with wet hands . Working on the equipment with wet hands can cause an electrical shock	
Do not clean the air conditioner by splashing water. Washing the unit with water can cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shock.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Do not tilt the unit when removing it. The water inside the unit can spill and wet the furniture and floor.	
Be sure to check that the refrigerating cycle section has cooled down sufficiently before conducting repair work. Working on the unit when the refrigerating cycle section is hot can cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency.	



1.2.2 Cautions Regarding Products after Repair


Warning	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools can cause an electrical shock, excessive heat generation or fire.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment can fall and cause injury.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation can cause the equipment to fall, resulting in injury.	For integral units only
Be sure to install the product securely in the installation frame mounted on a window frame. If the unit is not securely mounted, it can fall and cause injury.	For integral units only


Warning	
<p>Be sure to use an exclusive power circuit for the equipment, and follow the technical standards related to the electrical equipment, the internal wiring regulations and the instruction manual for installation when conducting electrical work.</p> <p>Insufficient power circuit capacity and improper electrical work can cause an electrical shock or fire.</p>	
<p>Be sure to use the specified cable to connect between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals.</p> <p>Improper connections can cause excessive heat generation or fire.</p>	
<p>When connecting the cable between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable.</p> <p>If the cover is not mounted properly, the terminal connection section can cause an electrical shock, excessive heat generation or fire.</p>	
<p>Do not damage or modify the power cable.</p> <p>Damaged or modified power cable can cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable can damage the cable.</p>	
<p>Do not mix air or gas other than the specified refrigerant (R-410A / R22) in the refrigerant system.</p> <p>If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.</p>	
<p>If the refrigerant gas leaks, be sure to locate the leak and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak.</p> <p>If the leak cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it can generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.</p>	
<p>When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it.</p> <p>If a child swallows the coin battery, see a doctor immediately.</p>	

Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If a combustible gas leaks and remains around the unit, it can cause a fire.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water can enter the room and wet the furniture and floor.	

1.2.3 Inspection after Repair

Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet all the way. If the plug has dust or loose connection, it can cause an electrical shock or fire.	
If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires can cause an electrical shock, excessive heat generation or fire.	





Warning	
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances since it can cause an electrical shock, excessive heat generation or fire.	

Caution	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections can cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame can cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding can cause an electrical shock.	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 M ohm or higher. Faulty insulation can cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage can cause the water to enter the room and wet the furniture and floor.	

1.2.4 Using Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

1.2.5 Using Icons List

Icon	Type of Information	Description
 Note	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, loose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
 Reference	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

1.2.6 Embedded wire checking before installation

Check the embedded wire diameter suitable to request:

(Power supply from indoor: 2.5kw $\geq 1.0\text{mm}^2$ 3.5kw,5kw $\geq 1.5\text{mm}^2$ 7kw $\geq 2.5\text{mm}^2$; Power supply from outdoor $\geq 1.0\text{mm}^2$)

Check the embedded wire are four roots, L/N/COM/GND; GND is needed, if not, thunder or high voltage wave from power grid will impact to the performance

Using a multi-meter to test short circuit of the four roots wires, make sure no short circuit happen.



2.Features



Super IFD

Advanced IFD air purification filter is able to remove even the tiniest particles to keep room air clean.



Precise Dehumidification

Precise Temperature & Humidity Control keeps your room air clean and comfortable.



Self Clean

With a new-generation hydrophilic foil, when the air conditioner in cooling or drying mode, the dust on evaporator will be taken away by condensed water flowing rapidly.



DRY Function

When the unit working in dry mode, it can adjust the indoor fan motor speed automatically according to the temperature gap between setting temperature and room temperature so as to get mild dehumidification or strong dehumidification.



Wi-Fi Control

Control your air conditioning system with smart phone or tablet which can connect internet.



Eco Sensor

Double human sense integrated module, double area detection, detection angle 120° (horizontal), detection distance within 8m.



24 Hours Timer

Use the timer function to set on, or off, or from on to off, or from off to on etc, within 24 hours.



Whispering Air

Optimize the noise control technology, such as frequency adjustment, fan speed control and air flue design decreasing noise level lowest to 15 dB(A). (Refer to Dawn 9k).



Comfortable Sleep

The setting temperature and the indoor noise can be adjusted to a more comfortable level when you set the "sleep mode" during night sleep.



3D Airflow

The 3D airflow is able to deliver the airflow horizontally and vertically, so bring the feeling like nature wind.



Intelligent Air

Airflow automatically upward when cooling or downward when heating to spread air automatically throughout the large room while without blowing directly to human body.



-15°C Heating

A special design for heating in cold winter even at -15°C with rotary compressor, etc.



Indoor 5 Steps Fan Speed

The indoor can be remote controlled with 5 steps of fan speed: powerful/high/automatic/low/quiet, which offer more choice for you to get comfort airflow.



Auto Vertical Airflow

With one special step motor to adjust the horizontal flaps moving vertically and automatically, it can realize 5 positions air angle, 2 intelligent air angle and total auto blowing, when the unit is switched off, the flap will close automatically.



-10°C Cooling

Special design for cooling even at lowest ambient temperature -10°C with high frequency rotary compressor, optimized refrigerant system and special defrosting program etc.



Precise Temp Control 0.5°C

Can make the setting temperature by 0.5°C so to achieve more precise comfort and energy saving.



Quiet Mode

Just press the button "turbo/quiet" on the remote controller, the air conditioner will work in quiet mode.



3 Minutes Protection

The 3 minutes protection of the compressor can avoid some damages to it and makes the compressor have a longer life.



Smart Defrosting

Haier smart defrost process is only performed when needed which reduces energy waste by eliminating the unneeded defrosting process. Enjoy maximum comfort in heating operation by reducing defrosting time.



Warm Start

when the unit start working at heating mode or change from cooling mode to heating mode the unit will not blow or blow at super low speed in order to avoid cold air disturbance.



1W Standby

Through programme control optimization, the stand-by power consumption has been lowered from 8W to about 1W.



Easy Support Clip

It is more convenient for installation by extending space with additional support clip, meanwhile, saving time.



Detachable Bottom Cover

With only opening decoration plate, installers can connect piping and wires. The triangle logo on bottom of casing can help to position mounting plate.



Easy & Quick Repair Motor

It can realize motor dismounting and maintenance without disassembling evaporator.



2-way Piping Design

The indoor unit offers the possibility of left and right piping direction, easy for installation.



Self-diagnosis

The LED display of the indoor units will show the error code in order to make service more easier.



Conseled LED Display

Special designed panel and LED display which make it possible to show the working states and functions only when the unit on while the display and frame can not be seen when unit off in order to keep indoor decoration with sense of wholeness. Of course you can cancel the display whenever you want.



Long Life Reliable PCB

Haier PCB is tested 96 hours under hard environment temperature 85°C & moisture 85%, this test condition is more or less 10 years under normal condition.



Integrative Structure Design

The optimized design integrates the bottom base, drain pan and frame casing together so as to level up product reliability and lower vibration.



Integrative Valve Cover

This valve cover is designed to cover both wiring terminal block and stop valves so as to enhance protect effect with nice design.



Blue Fin

The hydrophilic aluminum foil makes condensing water flow smoothly so guarantee the better performance with anti-corrosion effect.



DIY Auto Mode

You can set a temperature value, with which the unit can adjust the operation mode automatically.



Auto Mode

According to the fixed temperature 26°C (under heating) or 23°C (under cooling), the unit will adjust the operation mode automatically.



Auto Restart

The function permits automatic return to previous operation conditions after a sudden power break.



Wide Voltage For Inverter

The inverter unit can start up from 150V and operate in a wide voltage range from 150V-264V.



PID Inverter Control

PID Inverter Control can realize automatic adjustment of temperature difference variables based on the proportional integral theory, through comparison with targeted value, to correct the response of error correction system.



3 DC Motor

DC motor ensures more reliable operation with much higher energy saving and lower noise.

3 Specifications

NOMINAL DISTRIBUTION SYSTEM VOLTAGE		
Phase	/	1
Frequency	Hz	50
Voltage	V	220-240

NOMINAL CAPACITY and NOMINAL INPUT			
		cooling	heating
Capacity rated	KW	3.5(1.0-4.0)	4.2(1.3-5.8)
	Btu/h	11940(3410-13650)	14330(4430-19790)
Power Consumption(Rated)	KW	0.82	0.89
SEER/SCOP	W/W	8.75	5.1
Annual energy consumption	KWh	140	727
Moisture Removal	m ³ /h	1.2*10 ⁻³	

TECHNICAL SPECIFICATIONS			
Dimensions	H*W*D	mm	923*215*320
Packaged Dimensions	H*W*D	mm	1032*318*418
Weight	/	KG	12
Gross weight	/	KG	15.2
Color	/	/	White
Sound level	Sound pressure(Hi/Mid/Lo)	dB(A)	37/33/30
	Sound power(high)	dB(A)	57

TECHNICAL SPECIFICATIONS-PARTS				
			cooling	heating
Fan	Type		Cross flow fan	
	Motor output	W	45	45
	Air flow rate(high)	m ³ /h	600	600
	Speed(high/middle/low)	rpm	1100/925/750	1100/925/750
Heat exchanger	Type		ML fin- ϕ 7HI-HX tube	
	Segment *stage*fitch		3*16*1.4	
Air direction control			Horizontal,Downward	
Air filter			Removable/Washable/Mildew Proof	
Temperature control			Microcomputer Control	

Note: the data are based on the conditions shown in the table below

cooling	heating	Piping length
Indoor: 27°CDB/19°CWB Outdoor: 35°CDB/24°CWB	Indoor:20°CDB Outdoor: 7°CDB/6°CWB	5m


Conversion formulae
Kcal/h= KW×860
Btu/h= KW×3414
cfm=m ³ /min×35.3

4. Sensors list


type	Description	Qty
Room sensor	Its used for detecting room temperature	1
Pipe sensor	Its used for detecting pipe temperature	

5. Piping diagrams

Cooling mode

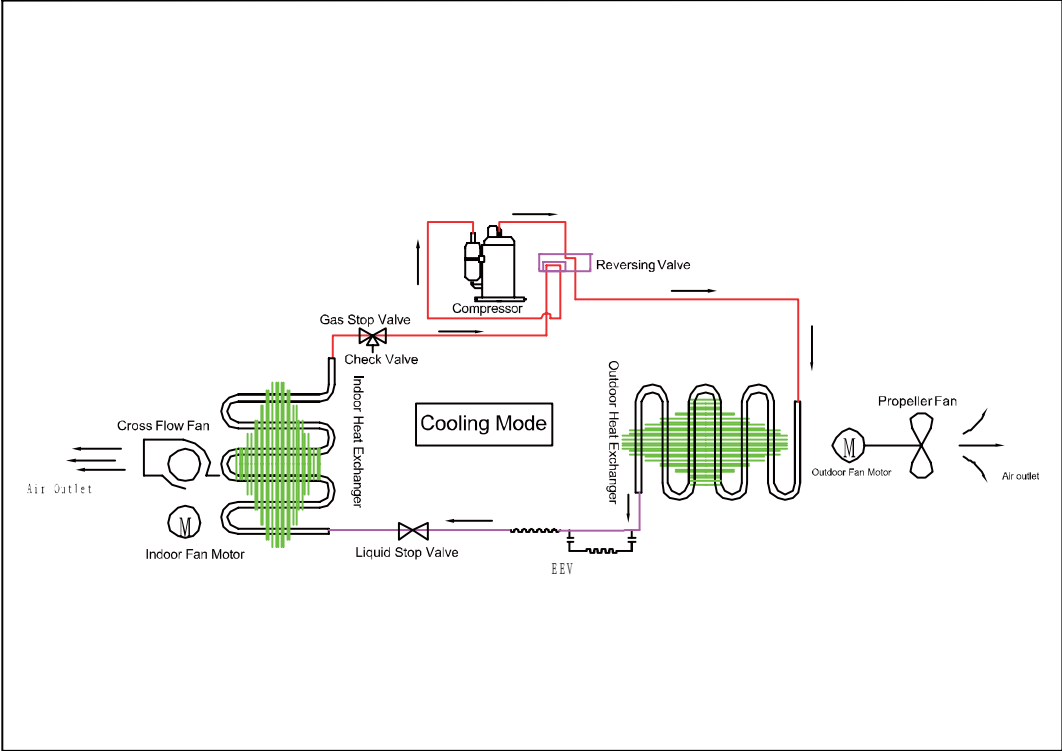

Heating mode

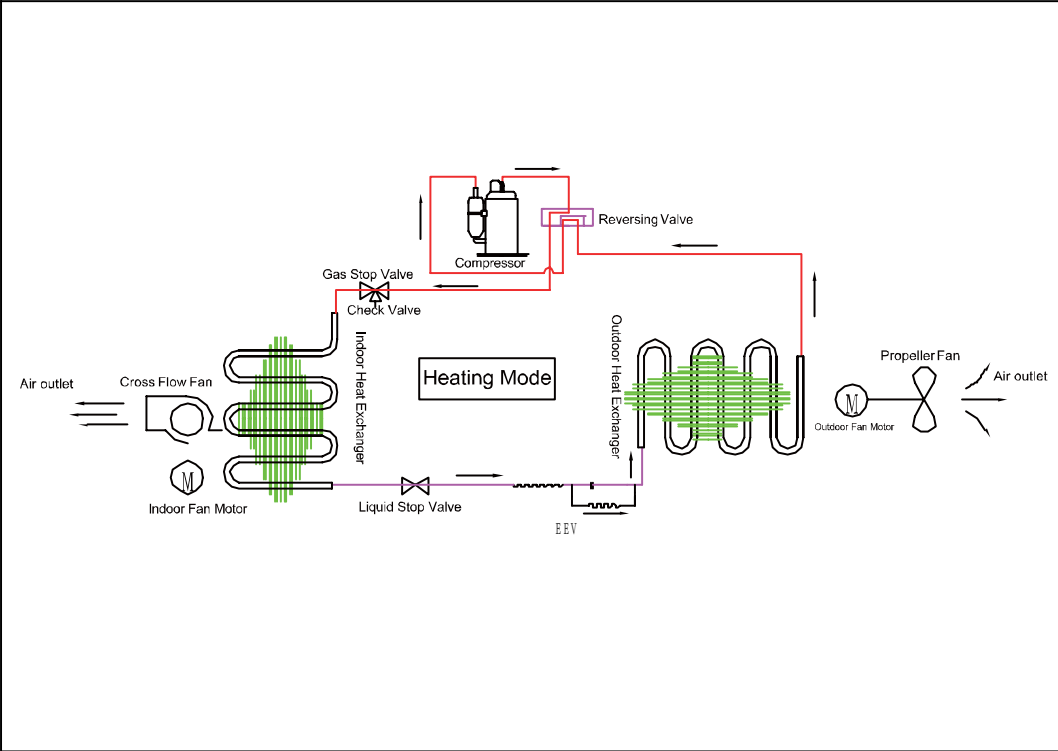

6. Printed Circuit Board Connector Wiring Diagram

Connectors

PCB(1) (Control PCB) For

- 1) CN9 Connector for fan motor
- 2) CN6 Connector for heat exchanger thermistor and Room temperature thermistor
- 3) CN5 Connector for UP&DOWN STEP motor
- 4) CN11 Connector for L&R STEP motor
- 5) CN21 Connector for power N wire
- 6) CN17 Connector for power L(In) CN22 Connector for power L(Out)
- 7) CN7 Connector for display board
- 8) CN18 Connector for humidity sensor
- 9) CN49 Connector for electrostatic dust collection module
- 10) CN56 Connector for human sensor
- 11) CN35 Connector for WIFI Module
- 12) CN15 Connector for drive assy.
- 13) CN50 Connector for PM2.5
- 14) CN16 Connector for MAG switch
- 15) CN12 Connector for Blade

Note: Other designations


PCB(1) (Indoor Control PCB)

- 1) SW1 Connector for Forced operation ON / OFF switch
- 2) RV1 Varistor
- 3) FUSE1 Fuse 3.15A/250VAC


UNI T MODEL	PCB MODEL
AS35S2SJ1FA-3	0011801121 (26)

UNI T MODEL	DI SPLAY MODEL
AS35S2SJ1FA-3	0011801011

UNI T MODEL	PURIFY MODEL
AS35S2SJ1FA-3	IFD

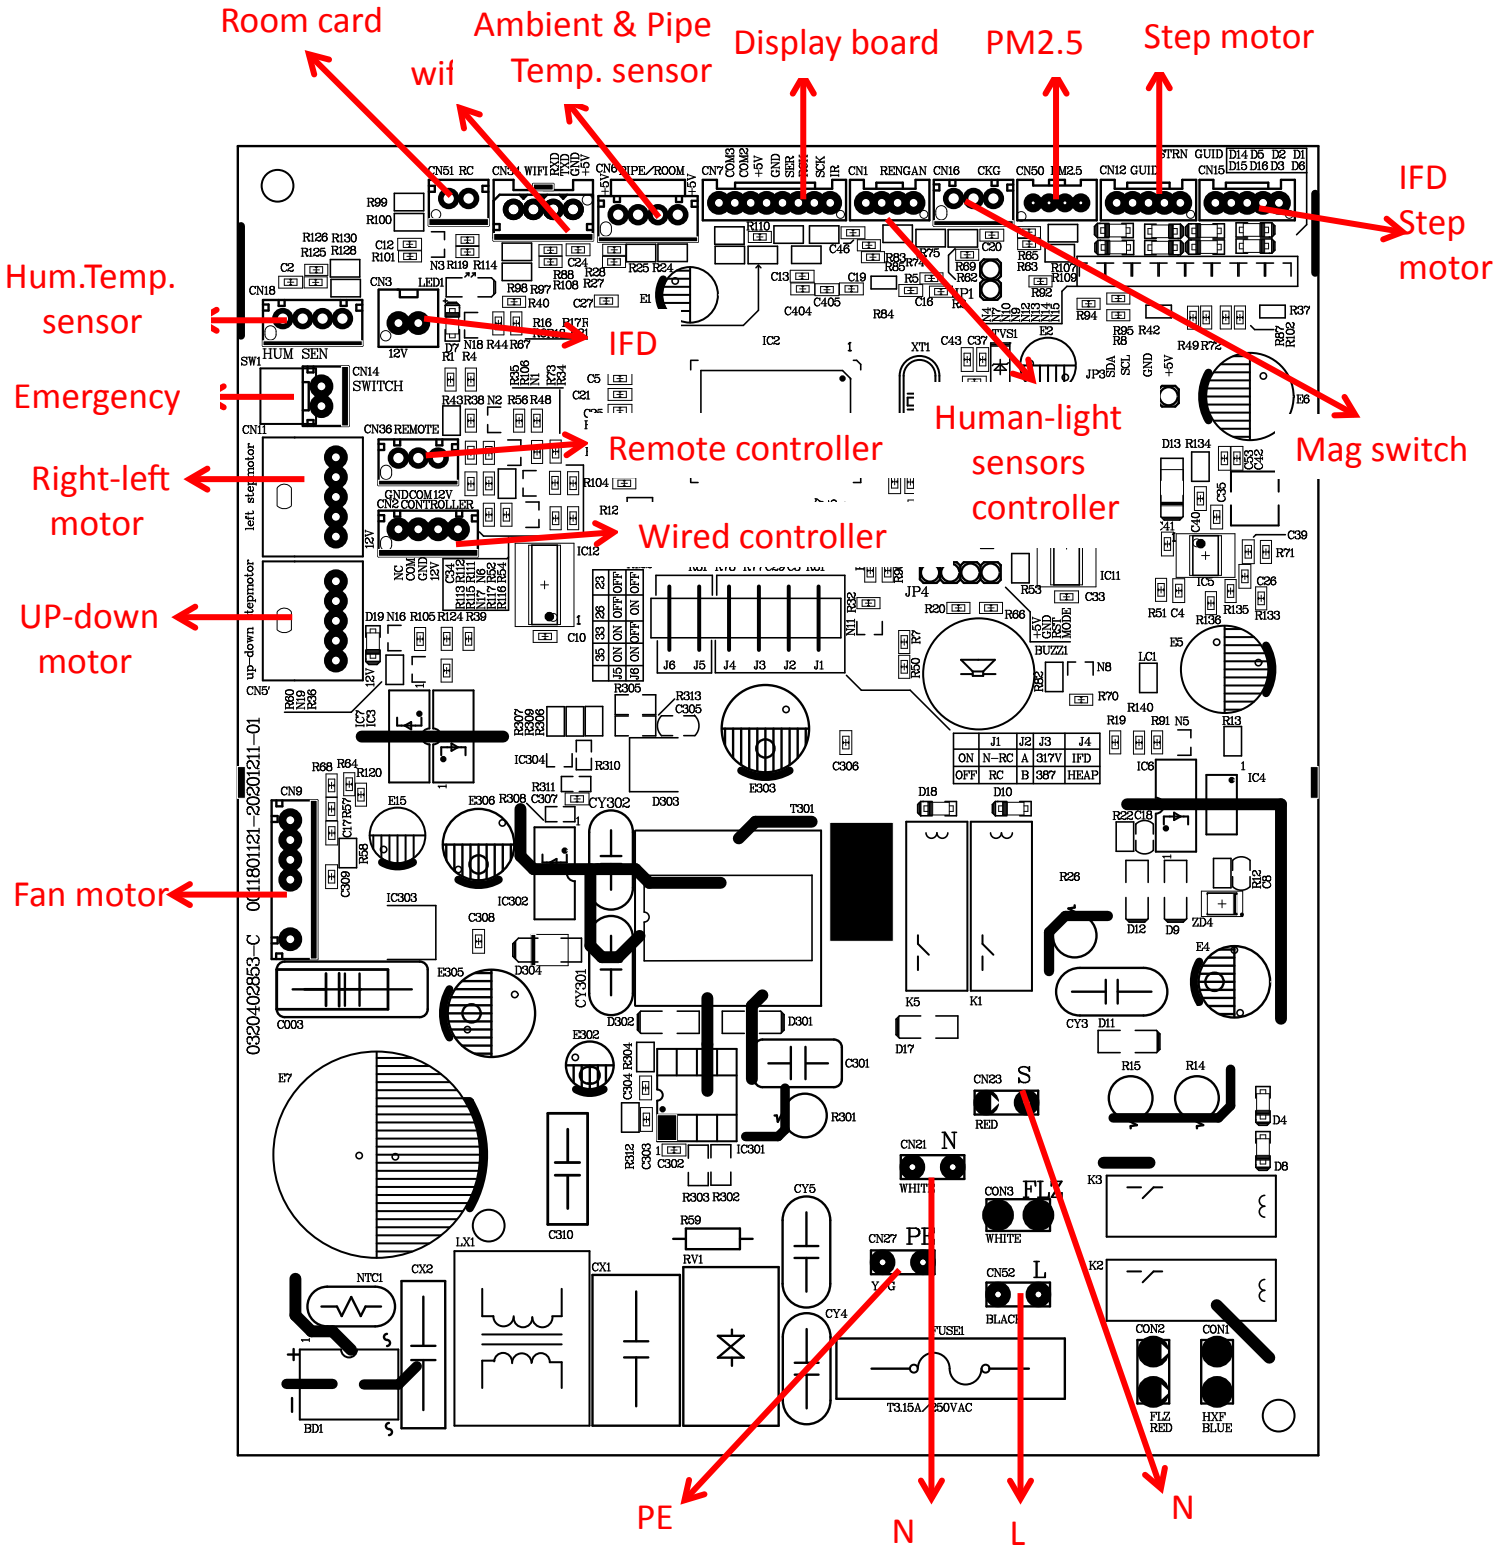

Wiring diagrams

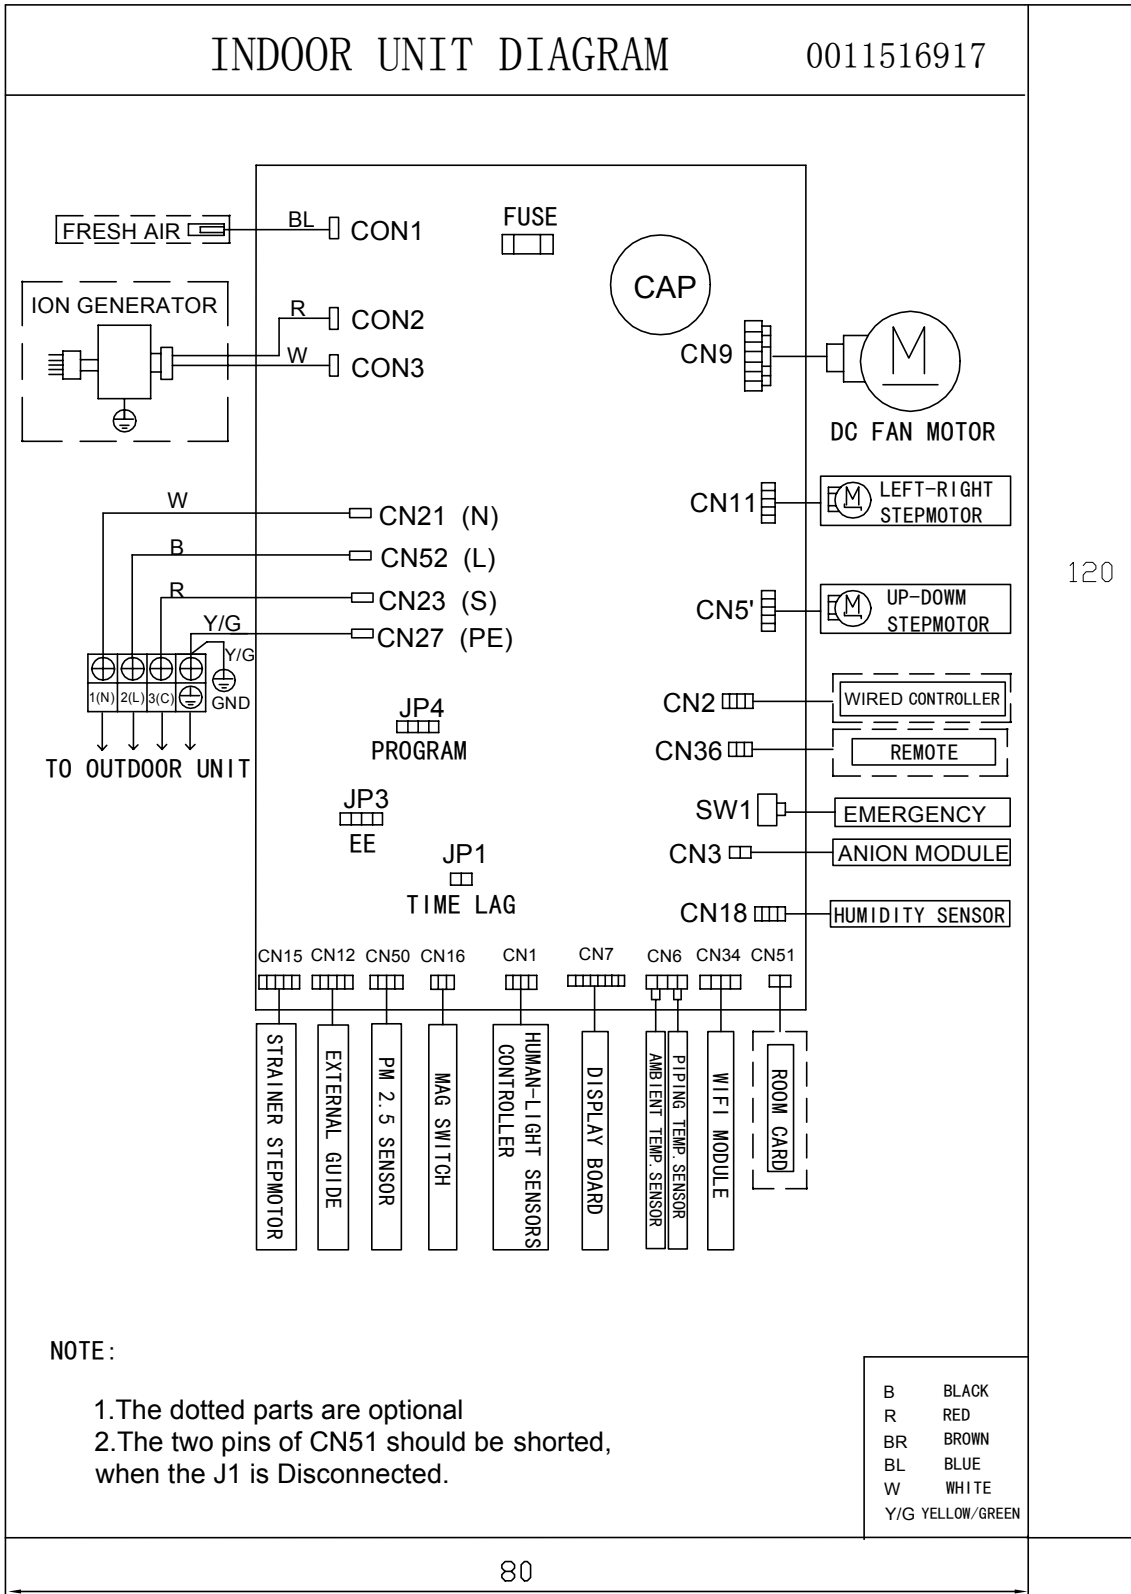

7.Functions and Control

7.1 Main functions and control specification

7.1.1 Automatic operation

When the running mode is turned to automation after starting the system, the system will first determine the running mode according to the current room temperature and then will run according to the determined mode. Tr in the following selection conditions means room temperature, Ts means setting temperature, Tp means temperature of indoor coil pipe

$Tr \geq 23^{\circ}\text{C}$ Choose Cooling Mode

$Tr < 23^{\circ}\text{C}$ Choose Heating Mode

After turning to the automation mode, the running mode can be switched between cooling mode, fan mode and heating mode according to the change of the indoor ambient temperature. But the automatic conversion between cooling mode and heating mode must be conducted after 15 minutes.

7.1.2 Cooling operation mode

Temperature control range: $16^{\circ}\text{C} \text{---} 30^{\circ}\text{C}$

Temperature difference: $\pm 1^{\circ}\text{C}$

* Control features: When $Tr(\text{input airflow}) > Ts(\text{set temperature})^{\circ}\text{C}$, the compressor will be opened, the indoor fan will operate at the set speed and the mode signal will be sent to the outdoor system. When $Tr(\text{input airflow}) < Ts(\text{set temperature})^{\circ}\text{C}$, the compressor will be closed, the indoor fan will operate at the set speed and the mode signal will be sent to the outdoor system. The system will keep the original status if $Tr = Ts$.

Airflow speed control: (temperature difference 1°C)

Automatic: When $Tr \leq Ts + 3^{\circ}\text{C}$, high speed.

When $Ts + 1^{\circ}\text{C} \leq Tr < Ts + 3^{\circ}\text{C}$, medium speed

When $Tr < Ts + 1^{\circ}\text{C}$, low speed

When the sensor is off, low speed

When the airflow speed has no delay from the high to low switching, the speed should be delayed for 3 minutes (remain at high speed for 3 minutes.) before the next switch. Manual: When the system is operating, you can set the high, medium or low speed manually. (When the sensor is on or off, the system will change the speed 2 seconds after receiving the signal.)

The blade location control: the location for the blade can be set according to your needs.

* timing system on/off function.

* Dormant control function.

7.1.3 Demoisture mode.

* temperature control range: 16---30°C

* temperature difference: $\pm 1^\circ\text{C}$

Control feature: send the demoisture signal to the outdoor system.

When $T_r > T_s + 2^\circ\text{C}$, the compressor will be turned on, the indoor fan will operate at the set speed.

When T_r is between the T_s and $T_s + 2^\circ\text{C}$, the outdoor system will operate at the high demoisture frequency for 10 minutes and then at the low demoisture mode for six minutes. The indoor fan will operate at low speed.

When $T_r < T_s$, the outsystem will be stopped, the indoor fan will be stopped for 3 minutes and then turned to the low speed option.

All the frequency converses have a $\pm 1^\circ\text{C}$ difference.

* Wind speed control: Automatic:

When $T_r \geq T_s + 5^\circ\text{C}$, high speed.

When $T_s + 3^\circ\text{C} \leq T_r < T_s + 5^\circ\text{C}$, medium speed.

When $T_s + 2^\circ\text{C} \leq T_r < T_s + 3^\circ\text{C}$, low speed.

When $T_r < T_s + 2^\circ\text{C}$, light speed.

If the outdoor fan stopped, the indoor fan will be paused for 3 minutes.

If the outdoor fan stopped for more than 3 minutes and the outdoor system still operates, the system will be changed into light speed mode.

When the airflow speed has no delay from the high to low switching, the speed should be delayed for 3 minutes (remain at high speed for 3 minutes.) before the next switch.

Manual: When the sensor is off or $T_r < T_s + 3^\circ\text{C}$, the manual operation can not be made. (obligatory automatic operation.)

* Airgate location control: the location for the airgate can be set according to your needs.

* Defrosting function: preventing the frosting on the indoor heat exchanger (when cooling or demoisture). When the compressor works continuously for 1/6 minutes (adaptable in EEPROM) and the temperature of the indoor coils has been below zero centigrade for 10 seconds, the compressor will be stopped and the malfunction will be recorded in the malfunction list. The indoor system will continue to run. When the temperature of the indoor coil is raised to 7°C , the compressor will be restarted again (the prerequisite of 3 minutes' delay should be satisfied.)

* coil protection (synchronic overheating protection) are installed for the four directions latch malfunctions when demoisturing.

* timing system on/off function.

* Dormant control function.

7.1.4 Heating operation mode.

* temperature control range: 16---30°C

* temperature difference: $\pm 1^\circ\text{C}$

* control feature: the temperature compensation is automatically added and the system will send the heating signals to the outdoor system.

If $T_r \leq T_s$, the outdoor compressor is turned on, the indoor fan will be at the cold air proof mode.

If $T_r > T_s + 1$, the outdoor system is turned off, the indoor fan will be at the heat residue sending mode.

If $T_r < T_s + 1$, the outdoor system will be turned on again, the indoor fan will be at the cold air proof mode.

***Indoor fan control**

manual control: You can choose high, medium, low and automatic speed control.

Automatic: When $T_r < T_s$, high speed.

When $T_s \leq T_r \leq T_s + 2^\circ\text{C}$, medium speed.


When $T_r > T_s + 2^\circ\text{C}$, low speed.

When the airflow speed has no delay from the high to low switching, the speed should be delayed for 3 minutes (remain at high speed for 3 minutes.) before the next switch.

*Airgate location control: the location for the airgate can be set according to your needs.

Coldair proof operation

1. The indoor operation within 4 minutes after the start up is as the following diagram, the air speed can be raised only after the speed has reached a certain level.

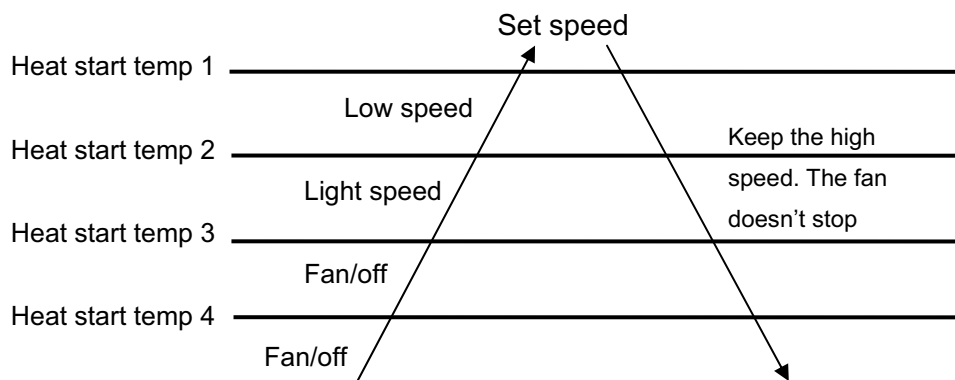

2. 4 minutes after the start up of the indoor fan, the light airflow and the low airflow will be turned to the set speed airflow.

3. In the cold air proof operation, the fan won't stop after the start up.

4. During the cold air proof operation, the indoor system will continuously send 'indoor high speed' signals to the outdoor system.

* Residue heat sending. The indoor fan will send the residue heat at a low speed for 12 seconds.

If other conditions are satisfied, when the compressor stops, the indoor system will operate at a light speed. The indoor fan will stop when the coil temperature is below the 'heat start temp 4'.

* Defrosting. When the system receives the defrosting signal from outdoors, the indoor fan will stop and the indoor temperature display won't change. At the time, any indoor coil malfunctions will be neglected. When the outdoor defrosting finishes, the coil malfunction will still be neglected until the compressor has been started up for 30 seconds. The indoor temperature display will not change and the system operates at the cold air proof mode.

* Automatic heating temperature compensation: when the system enters the heating mode, the temperature compensation (4) will be added. When the status is switched off, the compensation will be erased.

7.1.5 Strength operation

The system enters the mode after receiving the 'strength signal'.

Send strength operation signal to the outdoor system.

The mode change finishes the strength operation.

Entering 'mute', you can have normal operation or signal control such as timing to finish the strength operation.

When the system is at the automatic option with the strength/ mute function, if the system enters the cooling mode, the cooling strength/ mute function will be offered; if the system enters the heating mode, then the heating strength/ mute function will be offered; if the system enters the airflow mode, there will be no strength/ mute function.

7.1.6 Mute operation

The system enters the mode after receiving the 'mute signal'.

- a. Mute heating: the airflow speed is slight, the system sends the mute signal to the outdoor system.
- b. mute cooling: the airflow speed is slight, the system sends the mute signal to the outdoor system.

When the compressor operates, the airflow speed is mute speed. EEPROM is adaptable.

Mute operation can not work under the dehumidifying and airflow-sending operation.

7.1.7 Air refreshing

After receiving the signal from the remote control, (HV series: the background light of the 'health' logo is green. HS series: the 'health' indicator will be lighted). If the fan operates, the Nano-Aqua operates to realize the ions sending function.

If the indoor fan stops, the Nano-Aqua is turned off.

When the Nano-Aqua is turned off, if the air refreshing system is turned on, the Nano-Aqua will be turned on when the fan operates.

7.1.8 Timing

You can set 24 hours' on/off timing accordingly. After the setting, the timing indicator will be lightened. Also, the light will be turning off after the timing is finished. The followings are several timing methods.

1.system /on timing: The timing indicator will be lightened and the indoor system is under the waiting mode. The light will be turned off when the timing is finished and the rest of the system will operate under a normal condition. The timing starts since the last reception of the timing signal.

2.system /off timing: When the system is turned on, the timing indicator is lightened, the rest of the system will operated under a normal condition. When set time comes, the indicator light will be turned off and the system will be turned off. If you have set the dormant functions, the order of your settings will be operated according to the timing settings.

3 .system /on and off timing: The settings will be completed according to the orders..

7.1.9 Dormant operation

The dormant timing is an eight hours unadaptable one. The timing signs are shown on the V series board. (RC series show the dormant signal, the timing light is lighted on the 6 lights board).

2.1 Under the cooling/ dehumidifying operation, after the setting of the dormant operation, the set temperature will be raised for 1 centigrade after 1 hour's operation and will be raised for 1 centigrade 1 hour later. The system will keep this status for 6 hours and then close.

2.2 Under the heating mode, after the setting of the dormant operation, the setting temperature will fall 2 centigrade after 1 hour's operation and will fall 2 centigrade 1 hour later. 3 hours after the preceding operations, the set temperature will be raised for 1 centigrade and the system will keep this status for 3 hours

and then close down.

2.3 During the dormant time, except the change of the system mode or a new press on the dormant setting keys, the timing of the 8 hours dormancy will take the first timing as the start time, any presses on other keys will not affect the original timing.

2.4 Indoor fan control under the dormant operation.

If the indoor fan is at the high speed before the dormant operation setting, the speed will be turned to medium after the setting. If the fan is at the medium speed before the dormant setting, the speed will be turned to low after the setting. If the fan is at the low speed before the dormant setting, the speed will not change.

7.1.10 Urgent on/off input

Press the urgency button the buzzer will ring. The system will enter the automatic mode if you don't press the button for more than 5 seconds.

Under the system off mode, if you press the urgency key for 5 to 10 seconds, the system will start the test operation.

Under the system off mode, if you press the urgency key for 10 to 15 seconds, the display screen will show the resume of the last malfunction.

If the system is under operation, the press on the urgency key will stop it.

Under the system off mode, the display screen will show automatic running sign.

Under the system off mode, the system will not receive the remote control signal if the press on the urgency key doesn't last for 15 seconds or if the key is loosened.

Urgency operation: If you press the urgency key for less than 5 seconds, the buzzer will ring when you press the on/off key. The system will enter the urgency operation when the urgency key is loosened. The urgency operation is fully automatic.

Test operation.

The inlet temperature sensor doesn't work, the indoor fan and the indoor air direction board motor works synchronically. High speed airflow, cooling, outdoor system on, etc, will send the ambient temperature 30 centigrade and coil temperature 16 centigrade information to the outdoor system.

Test operation

The defrost protection of the evaporator doesn't work.

The temperature control doesn't work.

The test operation will be finished in 30 minutes.

The test operation can be stopped by the relative commands from the remote control.

7.1.11 Freeze Protection Function :

preventing the freezing on the indoor heat exchanger (when cooling or dehumidifying).

When the compressor works continuously for 2 minutes and the temperature of the indoor coils has been below 0 °C, the compressor will be stopped and the malfunction will be recorded in the malfunction list. When the temperature of the indoor coil is raised to 9 °C, For more than 3 minutes the compressor will be restarted again and the system will continue functioning.

7.1.12 High load protection control

The outdoor system will be stopped if the coil temperature is above 65 °C for 2 minutes. The indoor fan will be

controlled by the thermostat. The outdoor system can be restarted when the coil temperature is below 42°C and the system has been stopped for 3 minutes. The malfunction will be stored in the malfunction resume and will not be revealed.

7.1.13 Abnormal operation of indoor system

When the outdoor system operates, if the indoor system operation differs from the outdoor system, the abnormal operation malfunction will be reported. 10s after the report, the indoor system will be closed.

Outdoor system mode	Indoor system mode	conflicts
cooling	heating	yes
cooling	cooling	no
cooling	airflow	no
heating	heating	no
heating	airflow	yes
heating	cooling	yes

7.1.14 Malfunction list resume.

Nothing is presented if there is no code list.

The malfunction display will automatically finish in 10 seconds.

The remote control only receives the signals for stop. According to the signals, the malfunction resume presentation finishes.

The resume restores after the power supply restores.

7.1.15 Abnormality confirmation approaches

1. indoor temperature sensor abnormality:

Under the operation, the normal temperature ranges from 120 degree to -30 degree. When the temperature goes beyond this range, the abnormality can be confirmed. If the temperature goes back into the range, the system will automatically resume.

2 .indoor heat interaction sensor abnormality:

Under the operation, the normal temperature ranges from 120 degree to -30 degree. When the temperature goes beyond this range, the abnormality can be confirmed. If the temperature goes back into the range, the system will automatically resume.

3 .indoor malfunction:

Outdoor malfunction: When the indoor system receives the outdoor malfunction codes, it will store the code into E2 for the malfunction list resume. The indoor system will continue to operate according to the original status, the malfunction code will not be revealed or processed.

4. transmission abnormality:

If the indoor system can't receive the outdoor system for 8 minutes, the communication abnormality can be confirmed and reported and the outdoor system will be stopped.

7.1.16 Single indoor system operation

* Enter condition: First, set the high speed airflow and 30 centigrade set temperature, then press the dormant

keys for 6 times within 7 seconds, the system will feedback with 6 rings.

* After the system enters the separate indoor system operation mode, the indoor system will operate according to the set mode and neglect the communication signals of the outdoor system. However, it has to send signals to the outdoor system.

* Quitting condition: This mode can be quitted after receiving the quitting signal from the remote control or urgency system. The indoor system thus can quit the single operation mode.

7.1.17 Power cut compensation

* Entering condition: Press dormant button 10 times within 7 second, the buzzer will ring 4 times and the present system status will be stored into the EEPROM of the indoor system.

* After entering the power cut compensation mode, the processing of the indoor system should be as the followings:

Remote control urgency signal: operate according to the remote control and the urgent conditions, the present status will be stored into the EEPROM of the indoor system.

* Quitting conditions: Press dormant button 10 times within 7 seconds and the buzzer will ring twice.

7.1.18 Fixed frequency operation

1. Fixed cooling: a. under G code condition: high speed cooling, set 16°C, press temperature '-' key and the set key at the same time. The system will enter the fixed frequency operation after the buzzer rings twice.

b. The proceeding programs are as the follows:

Entering the fixed frequency operation, you can set the fixed strength location 1 and send the cooling signal to the outdoor system. Meanwhile, you can fix the indoor system at high speed mode, the location of the airflow direction board can be switched to the maximal position.

c. Quitting condition: The fixed frequency cooling can be quitted after receiving the remote signal, and the system will enter the remote setting status.

2. Fixed heating: a. under G code condition: high speed heating, set 30°C, press temperature '+' key and the set key at the same time. The system will enter the fixed frequency operation after the buzzer rings twice.

b. The proceeding programs are as the follows:

Entering the fixed frequency operation, you can set the fixed strength location 1 and send the heating signal to the outdoor system. Meanwhile, you can fix the indoor system at high speed mode, the location of the airflow direction board can be switched to the maximal position.

c. Quitting condition: The fixed frequency heating can be quitted after receiving the remote signal, and the system will enter the remote setting status.

7.1.19 Test program

First, connect the test program terminal on the mainboard. Then connect the system to the power circuit. The test program will operate as follows.

HV series display: The buzzer rings for one time—the signal will be sent to outdoor system for 0.5 second—the violet is sent for 0.5-- the background light turns to white—the back ground light turns to white—the background light turns to white—the background light is fully lighted for 0.5 second—LED screen lights for 0.5 second— the step-in motor fully output for 0.5 second—then the motor doesn't output for 0.5 second—the motor fully output again for 0.5 second. The test program finishes.

7.1.20 Time cutting function:

Connect the test program terminal on the mainboard after connecting the system to the power circuit. The CPU of the main control will be 60 times faster.

7.1.21 Precise dehumidification:

In the hot weather in summer, it is necessary to regulate the ambient temperature and the regulation of humidity. Appropriate temperature and humidity control can give people a comfortable feeling, inhibit the growth of bacteria and molds in the environment. The program performs intelligent dehumidification according to different humidity values to achieve humidity adjustment.

- 1) Humidity greater than 40% (EE adjustable), implement general dehumidification control.
- 2) When the humidity is less than 40% (EE adjustable), the desiccant thermostat is processed by OFF.

7.1.22 Purification:

Use the PM2.5 sensor to detect the PM2.5 concentration in the room to determine whether to turn on the purification function. The purification module mechanism is located at the air inlet of the air conditioner, and can be slidably opened and closed to control the operation of the purification module. Users can control on or off via remote control or APP.

7.1.23 Filter reminder

The computerized board program can calculate the use time of filter element. If it is detected that the filter has been used for more than the set time, the PM2.5 symbol of the display flashes, and the light is on for 1 second and off 1 second (with the WiFi indicator), reminding the user to replace the filter element. And report to the APP "The cumulative time of floor cleaning arrives, reminding users to replace filter element", the APP pushes the filter replacement reminder to the user.

7.2 Value of thermistor

Pipe Sensor

R25°C=10KΩ ±3%

B25°C/50°C=3700K±3%

Temp.(°C)	Max.(KΩ)	Normal(KΩ)	Min.(KΩ)	Tolerance(°C)	
-30	165.2170	147.9497	132.3678	-1.94	1.75
-29	155.5754	139.5600	125.0806	-1.93	1.74
-28	146.5609	131.7022	118.2434	-1.91	1.73
-27	138.1285	124.3392	111.8256	-1.89	1.71
-26	130.2371	117.4366	105.7989	-1.87	1.70
-25	122.8484	110.9627	100.1367	-1.85	1.69
-24	115.9272	104.8882	94.8149	-1.83	1.67
-23	109.4410	99.1858	89.8106	-1.81	1.66
-22	103.3598	93.8305	85.1031	-1.80	1.64
-21	97.6556	88.7989	80.6728	-1.78	1.63
-20	92.3028	84.0695	76.5017	-1.76	1.62
-19	87.2775	79.6222	72.5729	-1.74	1.60
-18	82.5577	75.4384	68.8710	-1.72	1.59
-17	78.1230	71.5010	65.3815	-1.70	1.57
-16	73.9543	67.7939	62.0907	-1.68	1.55
-15	70.0342	64.3023	58.9863	-1.66	1.54
-14	66.3463	61.0123	56.0565	-1.64	1.52
-13	62.8755	57.9110	53.2905	-1.62	1.51
-12	59.6076	54.9866	50.6781	-1.60	1.49
-11	56.5296	52.2278	48.2099	-1.58	1.47
-10	53.6294	49.6244	45.8771	-1.56	1.46
-9	50.8956	47.1666	43.6714	-1.54	1.44
-8	48.3178	44.8454	41.5851	-1.51	1.42
-7	45.8860	42.6525	39.6112	-1.49	1.40

Functions and control

-6	43.5912	40.5800	37.7429	-1.47	1.39
-5	41.4249	38.6207	35.9739	-1.45	1.37
-4	39.3792	36.7676	34.2983	-1.43	1.35
-3	37.4465	35.0144	32.7108	-1.41	1.33
-2	35.6202	33.3552	31.2062	-1.38	1.31
-1	33.8936	31.7844	29.7796	-1.36	1.29
0	32.2608	30.2968	28.4267	-1.34	1.28
1	30.7162	28.8875	27.1431	-1.32	1.26
2	29.2545	27.5519	25.9250	-1.29	1.24
3	27.8708	26.2858	24.7686	-1.27	1.22
4	26.5605	25.0851	23.6704	-1.25	1.20
5	25.3193	23.9462	22.6273	-1.23	1.18
6	24.1432	22.8656	21.6361	-1.20	1.16
7	23.0284	21.8398	20.6939	-1.18	1.14
8	21.9714	20.8659	19.7982	-1.15	1.12
9	20.9688	19.9409	18.9463	-1.13	1.09
10	20.0176	19.0621	18.1358	-1.11	1.07
11	19.1149	18.2270	17.3646	-1.08	1.05
12	18.2580	17.4331	16.6305	-1.06	1.03
13	17.4442	16.6782	15.9315	-1.03	1.01
14	16.6711	15.9601	15.2657	-1.01	0.99
15	15.9366	15.2770	14.6315	-0.98	0.96
16	15.2385	14.6268	14.0271	-0.96	0.94
17	14.5748	14.0079	13.4510	-0.93	0.92
18	13.9436	13.4185	12.9017	-0.91	0.90
19	13.3431	12.8572	12.3778	-0.88	0.87
20	12.7718	12.3223	11.8780	-0.86	0.85
21	12.2280	11.8126	11.4011	-0.83	0.83
22	11.7102	11.3267	10.9459	-0.81	0.80
23	11.2172	10.8634	10.5114	-0.78	0.78
24	10.7475	10.4216	10.0964	-0.75	0.75
25	10.3000	10.0000	9.7000	-0.75	0.75
26	9.8975	9.5974	9.2980	-0.76	0.76
27	9.5129	9.2132	8.9148	-0.80	0.80
28	9.1454	8.8465	8.5496	-0.84	0.83
29	8.7942	8.4964	8.2013	-0.87	0.86
30	8.4583	8.1621	7.8691	-0.91	0.90
31	8.1371	7.8428	7.5522	-0.95	0.93
32	7.8299	7.5377	7.2498	-0.98	0.97
33	7.5359	7.2461	6.9611	-1.02	1.00
34	7.2546	6.9673	6.6854	-1.06	1.04
35	6.9852	6.7008	6.4222	-1.10	1.07
36	6.7273	6.4459	6.1707	-1.13	1.11
37	6.4803	6.2021	5.9304	-1.17	1.14
38	6.2437	5.9687	5.7007	-1.21	1.18

Domestic air conditioner

Functions and control

39	6.0170	5.7454	5.4812	-1.25	1.22
40	5.7997	5.5316	5.2712	-1.29	1.25
41	5.5914	5.3269	5.0704	-1.33	1.29
42	5.3916	5.1308	4.8783	-1.37	1.33
43	5.2001	4.9430	4.6944	-1.41	1.36
44	5.0163	4.7630	4.5185	-1.45	1.40
45	4.8400	4.5905	4.3500	-1.49	1.44
46	4.6708	4.4252	4.1887	-1.53	1.47
47	4.5083	4.2666	4.0342	-1.57	1.51
48	4.3524	4.1145	3.8862	-1.61	1.55
49	4.2026	3.9686	3.7443	-1.65	1.59
50	4.0588	3.8287	3.6084	-1.70	1.62
51	3.9206	3.6943	3.4780	-1.74	1.66
52	3.7878	3.5654	3.3531	-1.78	1.70
53	3.6601	3.4416	3.2332	-1.82	1.74
54	3.5374	3.3227	3.1183	-1.87	1.78
55	3.4195	3.2085	3.0079	-1.91	1.82
56	3.3060	3.0989	2.9021	-1.95	1.85
57	3.1969	2.9935	2.8005	-2.00	1.89
58	3.0919	2.8922	2.7029	-2.04	1.93
59	2.9909	2.7948	2.6092	-2.08	1.97
60	2.8936	2.7012	2.5193	-2.13	2.01
61	2.8000	2.6112	2.4328	-2.17	2.05
62	2.7099	2.5246	2.3498	-2.22	2.09
63	2.6232	2.4413	2.2700	-2.26	2.13
64	2.5396	2.3611	2.1932	-2.31	2.17
65	2.4591	2.2840	2.1195	-2.36	2.21
66	2.3815	2.2098	2.0486	-2.40	2.25
67	2.3068	2.1383	1.9803	-2.45	2.29
68	2.2347	2.0695	1.9147	-2.49	2.34
69	2.1652	2.0032	1.8516	-2.54	2.38
70	2.0983	1.9393	1.7908	-2.59	2.42
71	2.0337	1.8778	1.7324	-2.63	2.46
72	1.9714	1.8186	1.6761	-2.68	2.50
73	1.9113	1.7614	1.6219	-2.73	2.54
74	1.8533	1.7064	1.5697	-2.78	2.58
75	1.7974	1.6533	1.5194	-2.83	2.63
76	1.7434	1.6021	1.4710	-2.88	2.67
77	1.6913	1.5528	1.4243	-2.92	2.71
78	1.6409	1.5051	1.3794	-2.97	2.75
79	1.5923	1.4592	1.3360	-3.02	2.80
80	1.5454	1.4149	1.2942	-3.07	2.84
81	1.5000	1.3721	1.2540	-3.12	2.88
82	1.4562	1.3308	1.2151	-3.17	2.93
83	1.4139	1.2910	1.1776	-3.22	2.97

Domestic air conditioner

Functions and control

84	1.3730	1.2525	1.1415	-3.27	3.01
85	1.3335	1.2153	1.1066	-3.32	3.06
86	1.2953	1.1794	1.0730	-3.38	3.10
87	1.2583	1.1448	1.0405	-3.43	3.15
88	1.2226	1.1113	1.0092	-3.48	3.19
89	1.1880	1.0789	0.9789	-3.53	3.24
90	1.1546	1.0476	0.9497	-3.58	3.28
91	1.1223	1.0174	0.9215	-3.64	3.33
92	1.0910	0.9882	0.8942	-3.69	3.37
93	1.0607	0.9599	0.8679	-3.74	3.42
94	1.0314	0.9326	0.8424	-3.80	3.46
95	1.0030	0.9061	0.8179	-3.85	3.51
96	0.9756	0.8806	0.7941	-3.90	3.55
97	0.9490	0.8558	0.7711	-3.96	3.60
98	0.9232	0.8319	0.7489	-4.01	3.64
99	0.8983	0.8088	0.7275	-4.07	3.69
100	0.8741	0.7863	0.7067	-4.12	3.74
101	0.8507	0.7646	0.6867	-4.18	3.78
102	0.8281	0.7436	0.6672	-4.23	3.83
103	0.8061	0.7233	0.6484	-4.29	3.88
104	0.7848	0.7036	0.6303	-4.34	3.92
105	0.7641	0.6845	0.6127	-4.40	3.97
106	0.7441	0.6661	0.5957	-4.46	4.02
107	0.7247	0.6482	0.5792	-4.51	4.07
108	0.7059	0.6308	0.5632	-4.57	4.12
109	0.6877	0.6140	0.5478	-4.63	4.16
110	0.6700	0.5977	0.5328	-4.69	4.21
111	0.6528	0.5820	0.5183	-4.74	4.26
112	0.6361	0.5667	0.5043	-4.80	4.31
113	0.6200	0.5518	0.4907	-4.86	4.36
114	0.6043	0.5374	0.4775	-4.92	4.41
115	0.5891	0.5235	0.4648	-4.98	4.45
116	0.5743	0.5100	0.4524	-5.04	4.50
117	0.5600	0.4968	0.4404	-5.10	4.55
118	0.5460	0.4841	0.4288	-5.16	4.60
119	0.5325	0.4717	0.4175	-5.22	4.65
120	0.5194	0.4597	0.4066	-5.28	4.70

Room Sensor

R25°C=23KΩ ±3%

B25°C/50°C=3700K ±3%




Temp (°C)	resistance (KΩ)			(resist. tol)		(temp. tol) °C	
	Rmax	R(t) Normal	Rmin	MAX(+)	MIN(-)	MAX(+)	MIN(-)
-30	538.771	513.115	487.459	5.00	5.00	0.75	0.75
-29	502.577	478.894	455.211	4.95	4.95	0.75	0.75
-28	469.290	447.408	425.526	4.89	4.89	0.75	0.75
-27	438.613	418.379	398.145	4.84	4.84	0.75	0.75
-26	410.288	391.564	372.840	4.78	4.78	0.75	0.75
-25	384.088	366.751	349.414	4.73	4.73	0.75	0.75
-24	359.817	343.754	327.691	4.67	4.67	0.75	0.75
-23	337.296	322.407	307.518	4.62	4.62	0.75	0.75
-22	316.375	302.567	288.759	4.56	4.56	0.75	0.75
-21	296.916	284.105	271.294	4.51	4.51	0.74	0.74
-20	278.794	266.905	255.016	4.45	4.45	0.74	0.74
-19	261.904	250.866	239.828	4.40	4.40	0.74	0.74
-18	246.146	235.895	225.644	4.35	4.35	0.73	0.73
-17	231.433	221.911	212.389	4.29	4.29	0.73	0.73
-16	217.685	208.838	199.991	4.24	4.24	0.72	0.72
-15	204.831	196.609	188.387	4.18	4.18	0.72	0.72
-14	192.805	185.163	177.521	4.13	4.13	0.71	0.71
-13	181.548	174.443	167.338	4.07	4.07	0.71	0.71
-12	171.005	164.399	157.793	4.02	4.02	0.70	0.70
-11	161.126	154.983	148.840	3.96	3.96	0.70	0.70
-10	151.866	146.153	140.440	3.91	3.91	0.69	0.69
-9	143.184	137.870	132.556	3.85	3.85	0.68	0.68
-8	135.040	130.096	125.152	3.80	3.80	0.68	0.68
-7	127.398	122.799	118.200	3.75	3.75	0.67	0.67
-6	120.225	115.946	111.667	3.69	3.69	0.66	0.66
-5	113.492	109.510	105.528	3.64	3.64	0.66	0.66
-4	107.168	103.462	99.756	3.58	3.58	0.65	0.65
-3	101.228	97.779	94.330	3.53	3.53	0.65	0.65
-2	95.647	92.437	89.227	3.47	3.47	0.64	0.64
-1	90.403	87.415	84.427	3.42	3.42	0.63	0.63
0	85.472	82.691	79.910	3.36	3.36	0.63	0.63
1	80.837	78.248	75.659	3.31	3.31	0.62	0.62
2	76.478	74.067	71.656	3.25	3.25	0.61	0.61

3	72.377	70.133	67.889	3.20	3.20	0.61	0.61
4	68.520	66.430	64.340	3.15	3.15	0.60	0.60
5	64.889	62.943	60.997	3.09	3.09	0.59	0.59
6	61.470	59.659	57.848	3.04	3.04	0.59	0.59
7	58.253	56.566	54.879	2.98	2.98	0.58	0.58
8	55.222	53.651	52.080	2.93	2.93	0.57	0.57
9	52.366	50.904	49.442	2.87	2.87	0.56	0.56
10	49.676	48.314	46.952	2.82	2.82	0.56	0.56
11	47.140	45.872	44.604	2.76	2.76	0.55	0.55
12	44.749	43.569	42.389	2.71	2.71	0.54	0.54
13	42.494	41.395	40.296	2.65	2.65	0.54	0.54
14	40.366	39.343	38.320	2.60	2.60	0.53	0.53
15	38.358	37.406	36.454	2.55	2.55	0.52	0.52
16	36.463	35.577	34.691	2.49	2.49	0.51	0.51
17	34.673	33.848	33.023	2.44	2.44	0.50	0.50
18	32.982	32.215	31.448	2.38	2.38	0.50	0.50
19	31.385	30.671	29.957	2.33	2.33	0.49	0.49
20	29.874	29.210	28.546	2.27	2.27	0.48	0.48
21	28.445	27.828	27.211	2.22	2.22	0.47	0.47
22	27.095	26.521	25.947	2.16	2.16	0.46	0.46
23	25.816	25.283	24.750	2.11	2.11	0.45	0.45
24	24.606	24.111	23.616	2.05	2.05	0.45	0.45
25	23.460	23.000	22.540	2.00	2.00	0.44	0.44
26	22.396	21.947	21.498	2.04	2.04	0.45	0.45
27	21.386	20.949	20.512	2.09	2.09	0.46	0.46
28	20.429	20.003	19.577	2.13	2.13	0.47	0.47
29	19.520	19.104	18.688	2.18	2.18	0.49	0.49
30	18.657	18.252	17.847	2.22	2.22	0.50	0.50
31	17.837	17.442	17.047	2.26	2.26	0.51	0.51
32	17.059	16.674	16.289	2.31	2.31	0.53	0.53
33	16.318	15.943	15.568	2.35	2.35	0.54	0.54
34	15.614	15.249	14.884	2.39	2.39	0.55	0.55
35	14.944	14.588	14.232	2.44	2.44	0.57	0.57
36	14.306	13.960	13.614	2.48	2.48	0.58	0.58
37	13.699	13.362	13.025	2.53	2.53	0.59	0.59
38	13.123	12.794	12.465	2.57	2.57	0.61	0.61



39	12.572	12.252	11.932	2.61	2.61	0.62	0.62
40	12.048	11.736	11.424	2.66	2.66	0.63	0.63
41	11.548	11.244	10.940	2.70	2.70	0.65	0.65
42	11.072	10.776	10.480	2.74	2.74	0.66	0.66
43	10.617	10.329	10.041	2.79	2.79	0.68	0.68
44	10.184	9.904	9.624	2.83	2.83	0.69	0.69
45	9.770	9.497	9.224	2.88	2.88	0.71	0.71
46	9.376	9.110	8.844	2.92	2.92	0.72	0.72
47	8.999	8.740	8.481	2.96	2.96	0.73	0.73
48	8.639	8.387	8.135	3.01	3.01	0.75	0.75
49	8.296	8.050	7.804	3.05	3.05	0.76	0.76
50	7.967	7.728	7.489	3.09	3.09	0.78	0.78
51	7.654	7.421	7.188	3.14	3.14	0.79	0.79
52	7.354	7.127	6.900	3.18	3.18	0.81	0.81
53	7.067	6.846	6.625	3.23	3.23	0.82	0.82
54	6.793	6.578	6.363	3.27	3.27	0.84	0.84
55	6.531	6.322	6.113	3.31	3.31	0.85	0.85
56	6.281	6.077	5.873	3.36	3.36	0.87	0.87
57	6.041	5.842	5.643	3.40	3.40	0.89	0.89
58	5.811	5.618	5.425	3.44	3.44	0.90	0.90
59	5.592	5.404	5.216	3.49	3.49	0.92	0.92
60	5.383	5.199	5.015	3.53	3.53	0.94	0.94
61	5.182	5.003	4.824	3.58	3.58	0.95	0.95
62	4.989	4.815	4.641	3.62	3.62	0.97	0.97
63	4.806	4.636	4.466	3.66	3.66	0.99	0.99
64	4.629	4.464	4.299	3.71	3.71	1.01	1.01
65	4.461	4.300	4.139	3.75	3.75	1.03	1.03
66	4.300	4.143	3.986	3.79	3.79	1.04	1.04
67	4.145	3.992	3.839	3.84	3.84	1.06	1.06
68	3.997	3.848	3.699	3.88	3.88	1.08	1.08
69	3.856	3.710	3.564	3.93	3.93	1.10	1.10
70	3.720	3.578	3.436	3.97	3.97	1.13	1.13
71	3.591	3.452	3.313	4.01	4.01	1.14	1.14
72	3.466	3.331	3.196	4.06	4.06	1.16	1.16
73	3.347	3.215	3.083	4.10	4.10	1.19	1.19
74	3.233	3.104	2.975	4.14	4.14	1.20	1.20

75	3.122	2.997	2.872	4.19	4.19	1.23	1.23
76	3.017	2.895	2.773	4.23	4.23	1.26	1.26
77	2.918	2.798	2.678	4.28	4.28	1.27	1.27
78	2.821	2.704	2.587	4.32	4.32	1.30	1.30
79	2.728	2.614	2.500	4.36	4.36	1.33	1.33
80	2.639	2.528	2.417	4.41	4.41	1.36	1.36
81	2.555	2.446	2.337	4.45	4.45	1.36	1.36
82	2.472	2.366	2.260	4.49	4.49	1.40	1.40
83	2.394	2.290	2.186	4.54	4.54	1.42	1.42
84	2.319	2.217	2.115	4.58	4.58	1.45	1.45
85	2.246	2.147	2.048	4.63	4.63	1.48	1.48
86	2.177	2.080	1.983	4.67	4.67	1.49	1.49
87	2.110	2.015	1.920	4.71	4.71	1.51	1.51
88	2.045	1.952	1.859	4.76	4.76	1.55	1.55
89	1.983	1.892	1.801	4.80	4.80	1.57	1.57
90	1.923	1.834	1.745	4.84	4.84	1.59	1.59
91	1.865	1.778	1.691	4.89	4.89	1.61	1.61
92	1.809	1.724	1.639	4.93	4.93	1.63	1.63
93	1.755	1.672	1.589	4.98	4.98	1.63	1.63
94	1.702	1.621	1.540	5.02	5.02	1.66	1.66
95	1.652	1.572	1.492	5.06	5.06	1.66	1.66
96	1.602	1.524	1.446	5.11	5.11	1.69	1.69
97	1.554	1.478	1.402	5.15	5.15	1.69	1.69
98	1.507	1.433	1.359	5.19	5.19	1.69	1.69
99	1.462	1.389	1.316	5.24	5.24	1.70	1.70
100	1.418	1.347	1.276	5.28	5.28	1.70	1.70
101	1.374	1.305	1.236	5.33	5.33	1.71	1.71
102	1.332	1.264	1.196	5.37	5.37	1.71	1.71
103	1.289	1.223	1.157	5.41	5.41	1.72	1.72
104	1.249	1.184	1.119	5.46	5.46	1.72	1.72
105	1.208	1.145	1.082	5.50	5.50	1.73	1.73

8. Dimensional drawings

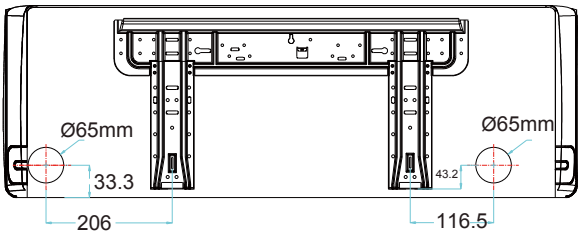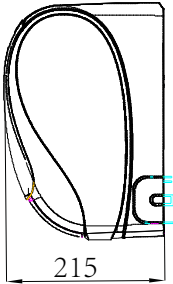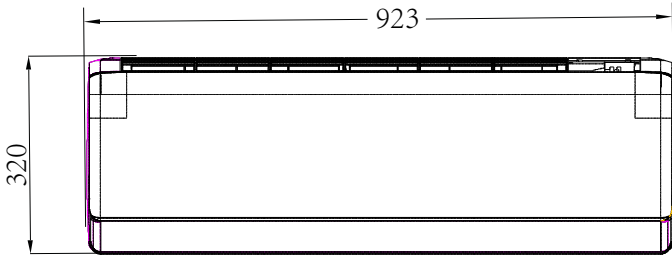

9. Center of gravity

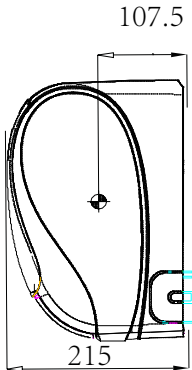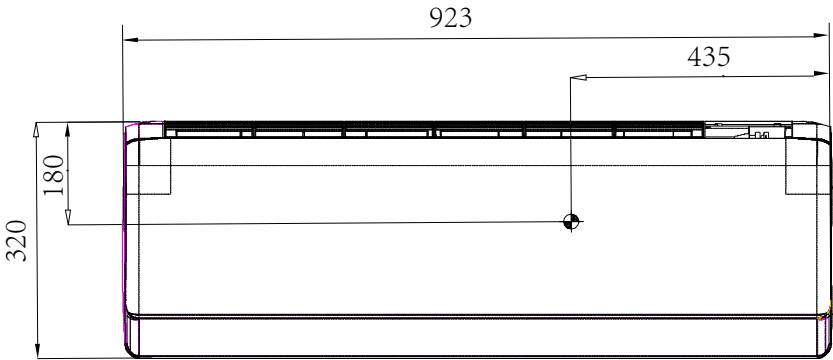


10 Service Diagnosis

10.1 Caution for Diagnosis

The operation lamp flashes when any of the following errors is detected.

1. When a protection device of the indoor or outdoor unit is activated or when the thermistor malfunctions, disabling equipment operation.
2. When a signal transmission error occurs between the indoor and outdoor units. In either case, conduct the diagnostic procedure described in the following pages.

10.2 Parameter of primary electronic appliance

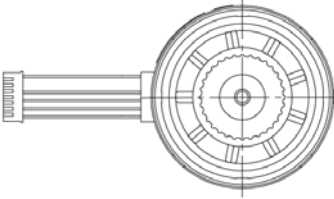NO	Name	Parameter	Picture
1	Fan motor	Rated voltage: DC310V Rated current:0.2A Rated frequency: –R Resistance:548 Ω	

10.3 Problem Symptoms and Measures

Symptom	Check Item	Details of Measure
None of the units operates	Check the power supply.	Check to make sure that the rated voltage is supplied.
	Check the indoor PCB.	Check to make sure that the indoor PCB is broken.
Operation sometimes stops	Check the power supply.	A power failure of 2 to 10 cycles can stop air conditioner operation.
Equipment operates but does not cool, or does not heat (only for heat pump)	Check for faulty operation of the electronic expansion valve.	Set the units to cooling operation, and compare the temperatures of the liquid side connection pipes of the connection section among rooms to check the opening and closing operation of the electronic expansion valves of the individual units.
	Diagnosis by service port pressure and operating current.	Check for insufficient gas.
Large operating noise and vibrations	Check the installation condition.	Check to make sure that the required spaces for installation (specified in the Technical Guide, etc.) are provided.

10.3 Error Codes and Description indoor display

	Code indication				fault description	Reference Page
	Indoor displaying panel code indication		Outdoor (LED1 flash times)			
	Other display	Only For 498 and 498A display (Red/Green Time Run □On★Flash■ Off)				
Indoor and Outdoor	E07	Directly display	■ ■ ★	15	Communication fault between indoor and outdoor units	Page.42
Indoor Malfunction	E01	Directly display	★ ■ ■	/	Indoor temperature sensor	Page.32
	E02	Directly display	★ □ □	/	Indoor coil sensor failure	Page.32
	E04	Directly display	★ □ ★	/	Indoor eeprom failure	Page.33
	E14	Directly display	■ □ ★	/	Indoor fan failure	Page.34
Outdoor Malfunction	E05	Trouble record	□ ■ ★	22	Internal unit antifreeze protection	/
	E09	Trouble record	□ ■ ★	21	Internal unit overload	Page.45
	F12	Directly display	■ ★ ■	1	Eeprom failure	Page.33
	F01	Directly display	□ ★ ★	2	IPM failure	Page.37
	F22	Directly display	★ ★ ■	3	AC current overcurrent protection	/
	F03	Directly display	■ ★ ■	4	Communication error between module board and main PCB board.	Page.39
	F20	Trouble record	■ ★ □	5	High pressure protection	/
	F19	Trouble record	■ ★ □	6	Power over/under voltage protection	Page.40
	F27	Directly display	■ ★ ■	7	Compressor stall / press instantaneous stop	/
	F04	Directly display	■ ★ ■	8	Compressor discharging temperature protection	Page.41
	F08	Trouble record	■ ★ □	9	Abnormal of DC motor	Page.35
	F21	Directly display	□ □ ★	10	Abnormal of piping sensor	/
	F07	Directly display	■ ★ ■	11	Suction temperature sensor failure	/
	F6	Directly display	□ ★ ■	12	Abnormal of outdoor ambient sensor	/
	F25	Directly display	★ □ ■	13	Abnormal of compressor discharge sensor	/
	F13	Trouble record	■ ★ □	16	Lack of refrigerant	/
	F14	Trouble record	■ ★ □	17	4-way valve reverse failure	Page.34
	F11	Directly display	■ ★ ■	18	Compressor jam (only for spdu)	Page.44
	F28	Directly display	■ ★ ■	19	Module PWM select circuit error	Page.44
	F15	Trouble record	■ ★ □	20	Outdoor terminal block temperature protection	/
	F02	Trouble record	■ ★ □	24	Instantaneous over-current protection of the compressor	Page.38
	F23	Trouble record	■ ★ □	25	Compressor U-phase overcurrent Compressor V-phase overcurrent Compressor W-phase overcurrent	/
	F09	Trouble record	/	26	Module reset	Page.45
	F24	Trouble record	★ ■ ★	27	CT disconnection	/
	F34	Trouble record	/	37	Outdoor coil protection	/
	F35	Trouble record	■ ★ □	38	Compressor driver board failure	/
	F43	/	■ ★ ■	46	Model matching abnormality	/

10.3.1 Thermistor or Related Abnormality

- Indoor Display ★ ■ ■/ E01: Room temperature sensor failure
 ★ □ □/ E02: Heat-exchange sensor failure
- Outdoor display LED1 flash 10 times: Defrost temperature sensor failure
 LED1 flash 11 times: Suction temperature sensor failure
 LED1 flash 12 times: Ambient temperature sensor failure
 LED1 flash 13 times: Discharge temperature sensor failure

Method of Malfunction Detection

The temperatures detected by the thermistors are used to determine thermistor errors

Malfunction Decision Conditions

When the thermistor input is more than 4.92V or less than 0.08V during compressor operation.


- Note: The values vary slightly in some models

Supposed Causes

- Faulty connector connection
- Faulty thermistor
- Faulty PCB


Troubleshooting

* Caution Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

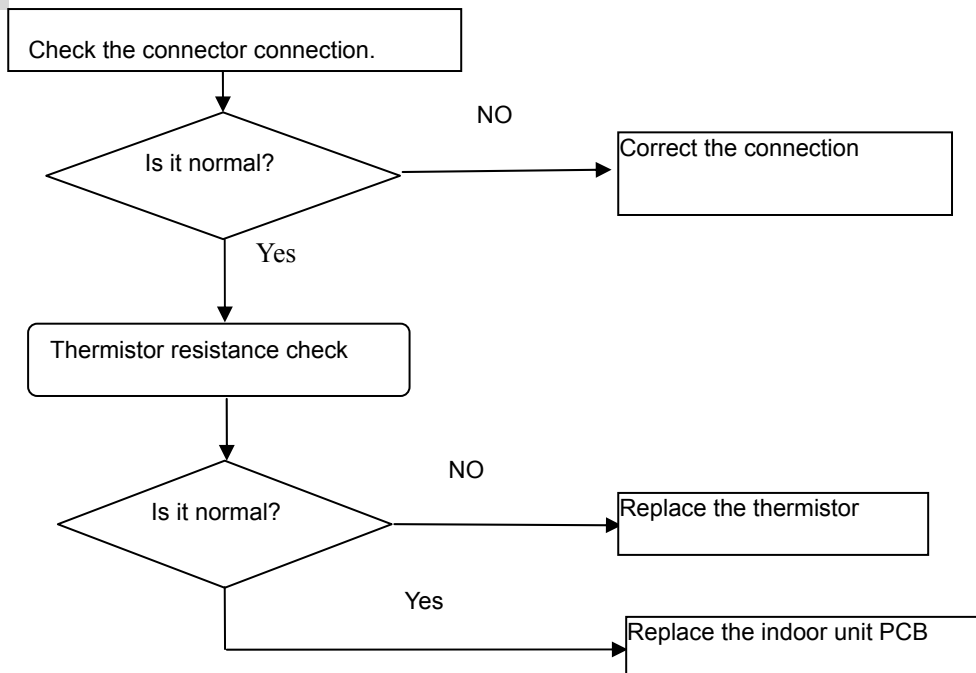

Thermistor resistance check method:

Remove the connector of the thermistor on the PCB, and measure the resistance of thermistor using tester. The relationship between normal temperature and resistance is shown in the value of indoor thermistor.

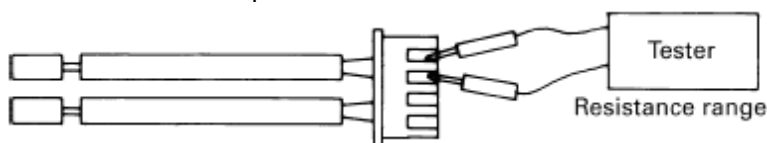

10.3.2 EEPROM abnormal

Indoor Display
Indoor display

★ □ ★/ E04: Indoor EEPROM error
■ ★ ■/ F12: Outdoor EEPROM error; Outdoor LED1 flash 1 times

Method of
Malfunction
Detection

The Data detected by the EEPROM are used to determine MCU

Malfunction
Decision
Conditions

When the data of EEPROM is error or the EEPROM is damaged

Supposed
Causes

- Faulty EEPROM data
- Faulty EEPROM
- Faulty PCB

Troubleshooting

* Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Replace the indoor or outdoor mainboard.

10.3.3 Indoor DC fan motor malfunction

Indoor Display ■ □ ★/E14

Method of Malfunction Detection

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation

Malfunction Decision Conditions


when the detected rotation feedback signal don't received in 2 minutes

Supposed Causes

- Operation halt due to breaking of wire inside the fan motor.
- Operation halt due to breaking of the fan motor lead wires
- Detection error due to faulty indoor unit PCB

Troubleshooting

* Caution Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

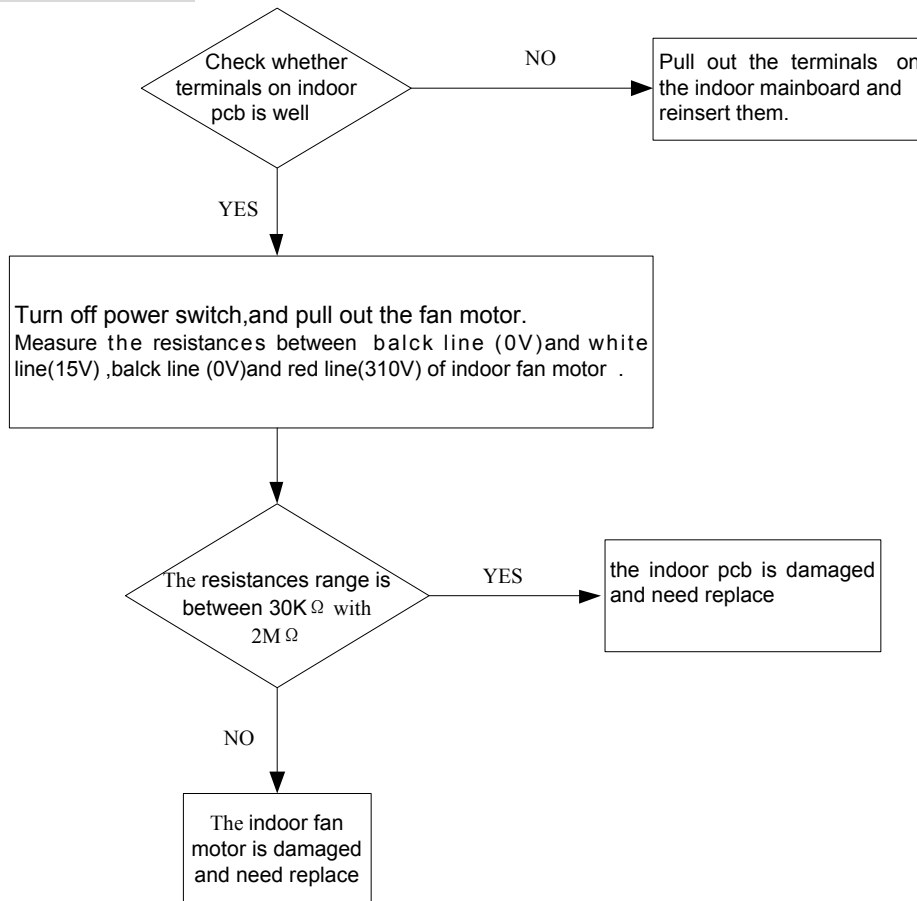

10.3.4 Outdoor DC fan motor fault

Outdoor display ■ ★ □ / F08 LED1 flash 9 times

Method of

DC fan motor is detected by checking the fan running condition and so on

Malfunction
Detection

Malfunction
Decision
Conditions


when the detected rotation feedback signal don't received in 2 minutes

Supposed
Causes

- DC fan motor protection dues to the DC fan motor faulty
- DC fan motor protection dues to faulty PCB

Troubleshooting

* Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

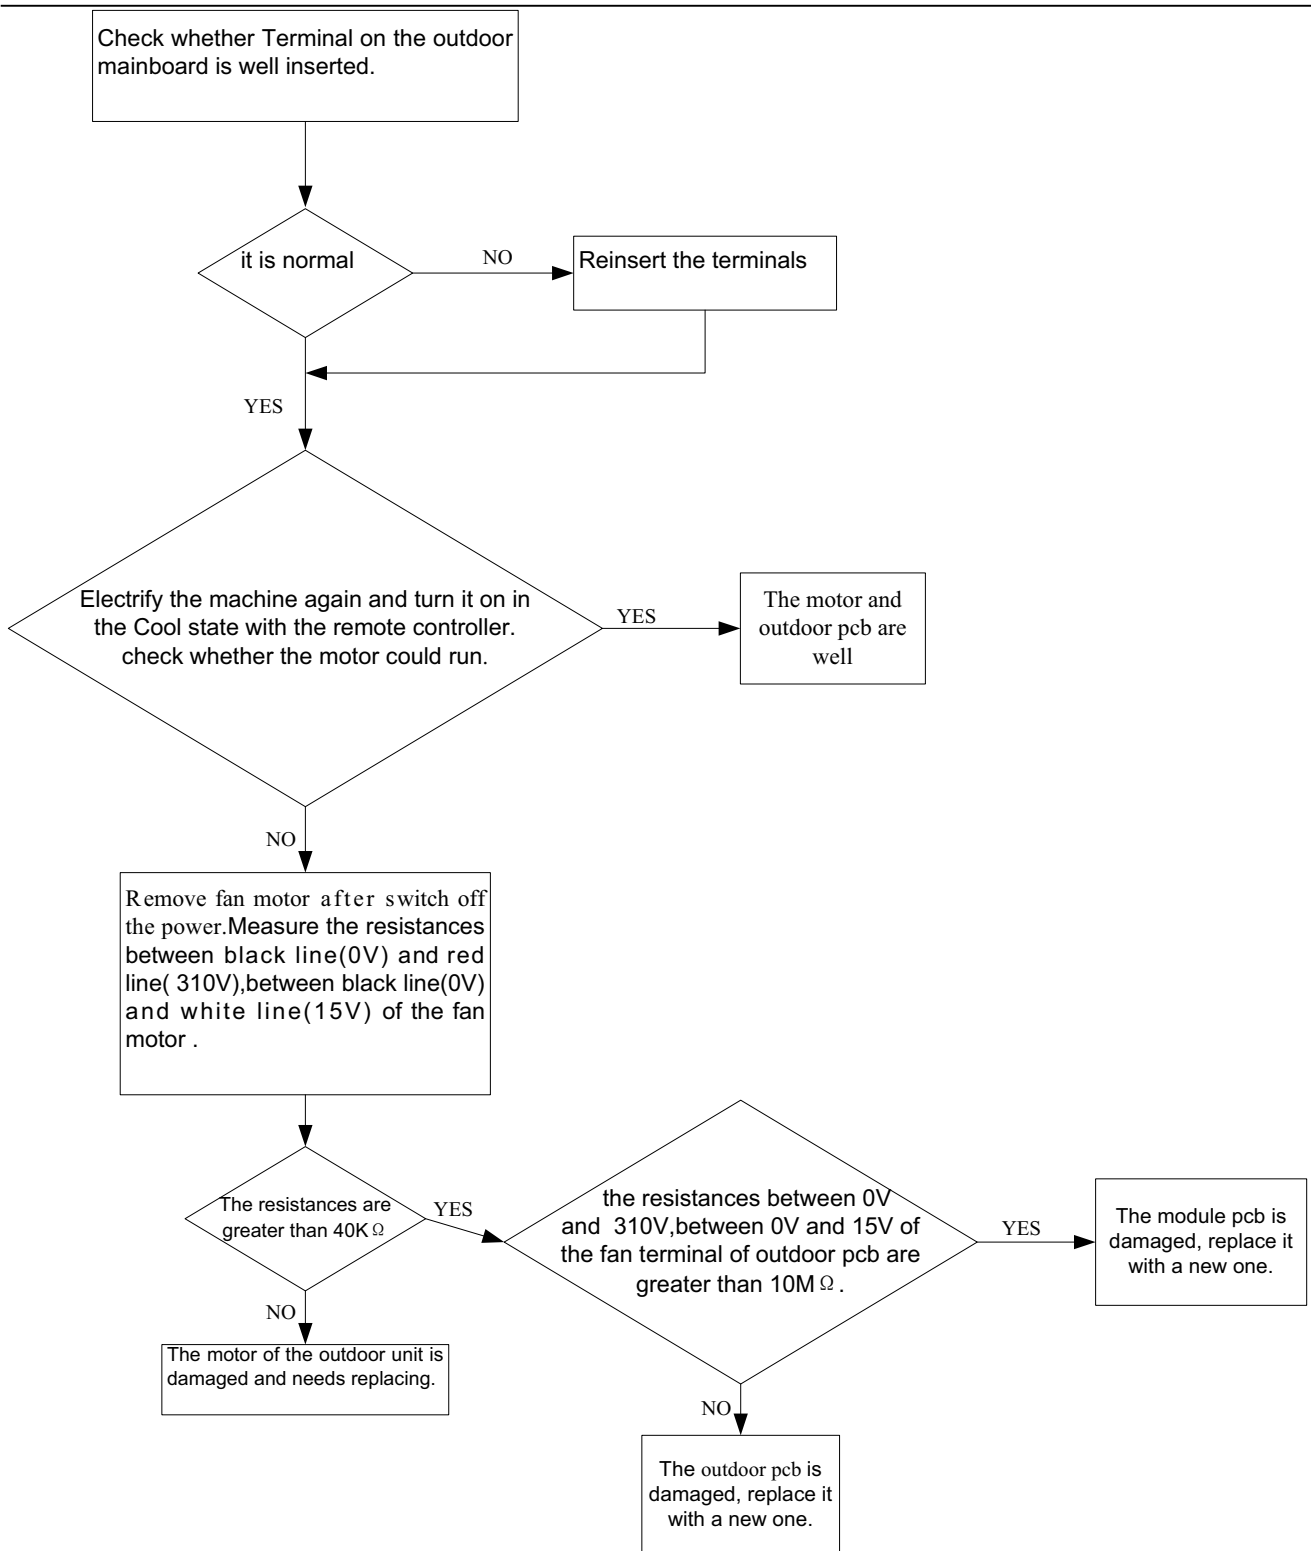

10.3.5 IPM protection

Outdoor display: ★ ★ / F01 LED1 flash 2 times

Method of Malfunction Detection

IPM protection is detected by checking the compressor running condition and so on

Malfunction Decision Conditions


- The system leads to IPM protection due to over current
- The compressor faulty leads to IPM protection
- circuit component of IPM is broken and led to IPM protection

Supposed Causes

- IPM protection dues to the compressor faulty
- IPM protection dues to faulty PCB of IPM module
- Compressor wiring disconnected

Troubleshooting

* Caution Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

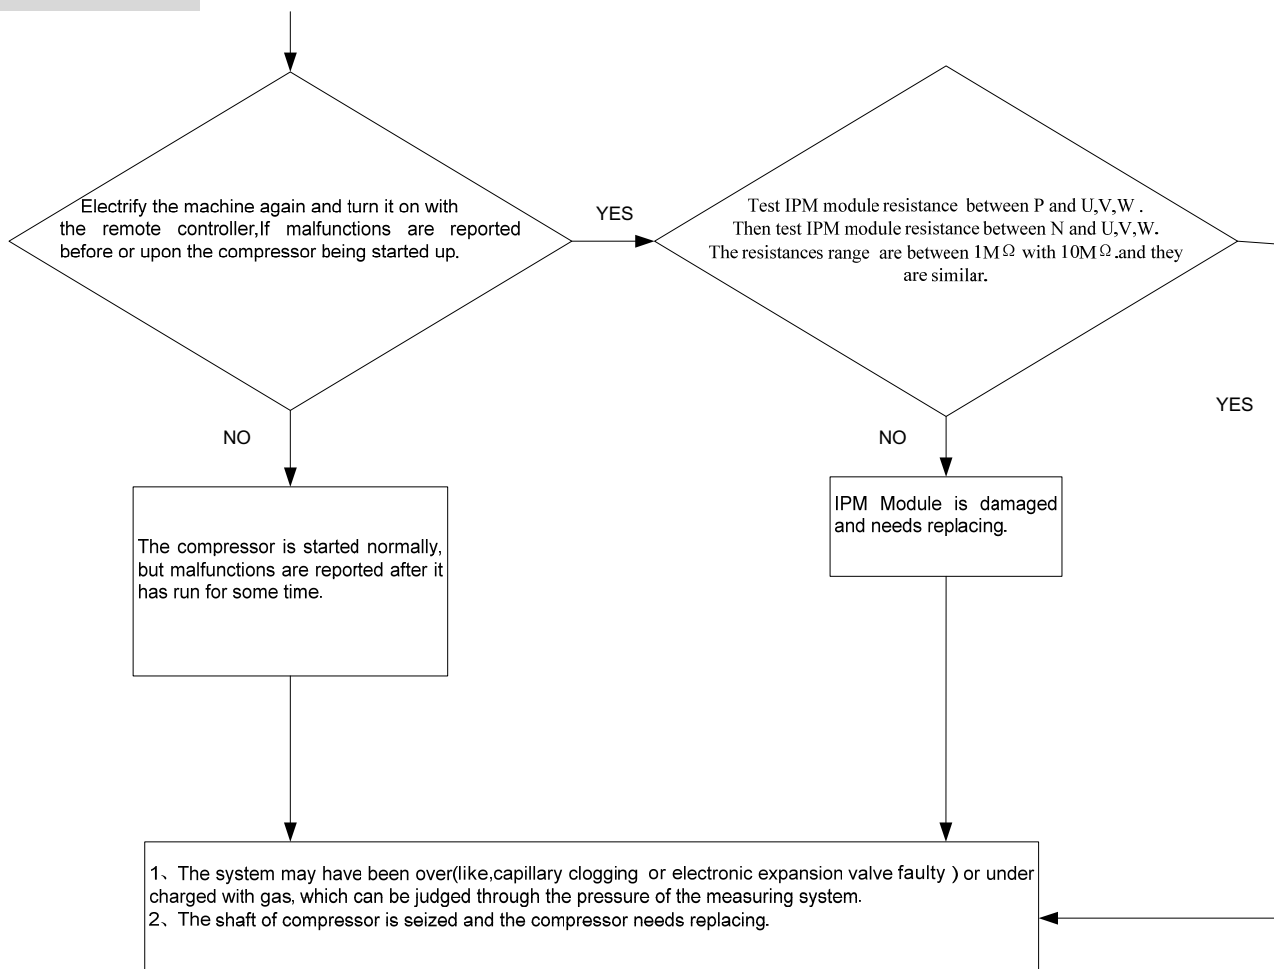

10.3.6 Over-current of the compressor

Outdoor Display: _____

■ ★ □/ F02 LED1 flash 3 or 24 or 25 times

Method of Malfunction Detection

The current of the compressor is too high

Malfunction Decision Conditions


when the IPM Module is damaged or the compressor is damaged.
power supply voltage is too low or too high

Supposed Causes

- Faulty IPM Module
- Faulty compressor
- Faulty power supply

Troubleshooting

* Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

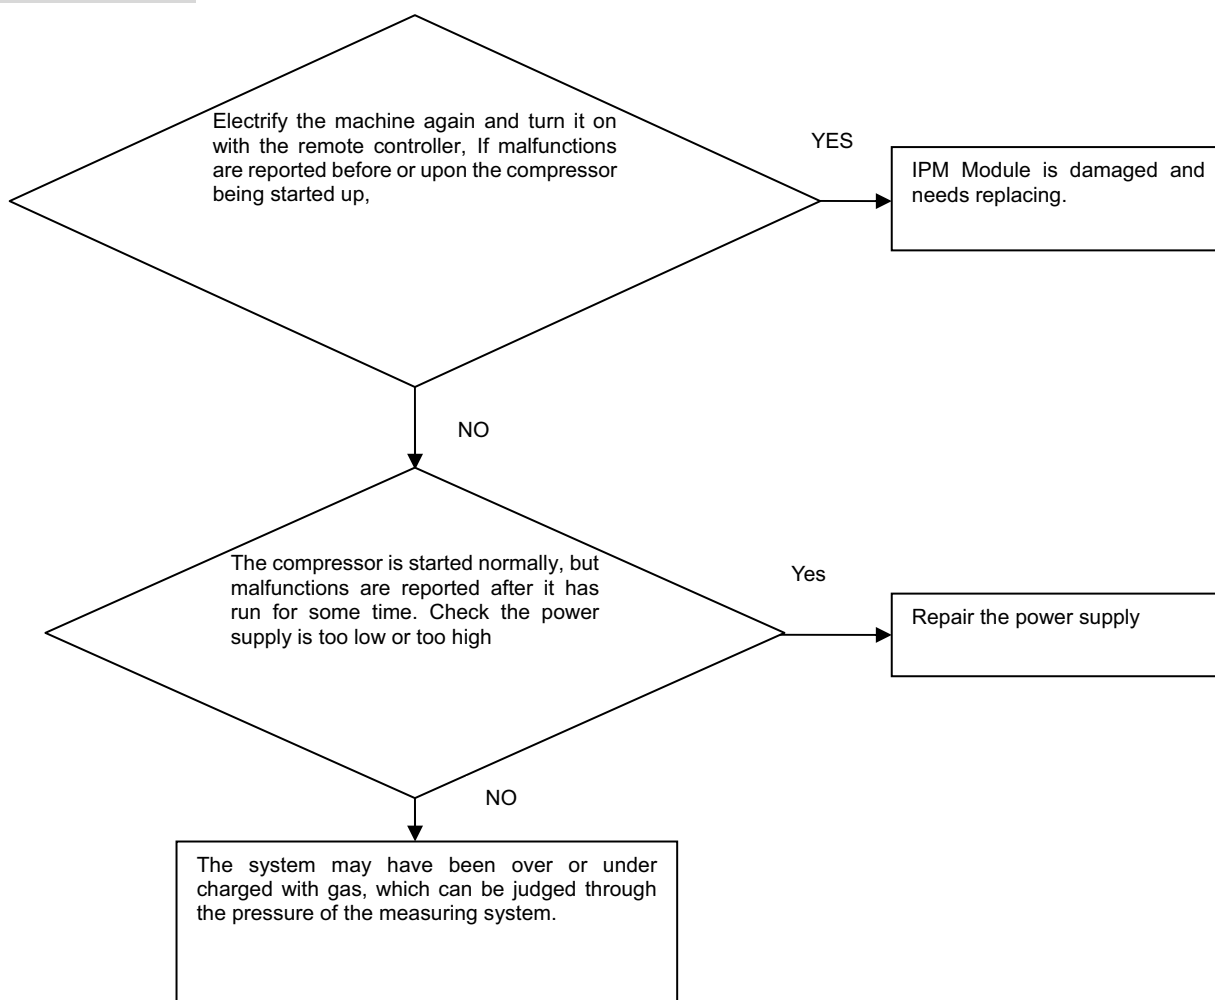

10.3.7 The communication fault between IPM and outdoor PCB

Outdoor display: ■ ★ ■/ F03 LED1 flash 4 times

Method of Malfunction Detection Communication is detected by checking the IPM module and the outdoor PCB


Malfunction Decision Conditions

- The outdoor PCB broken leads to communication fault
- The IPM module broken leads to communication fault

Supposed Causes

- The outdoor PCB is broken
- The IPM module is broken
- Communication wiring disconnected

Troubleshooting * Caution Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

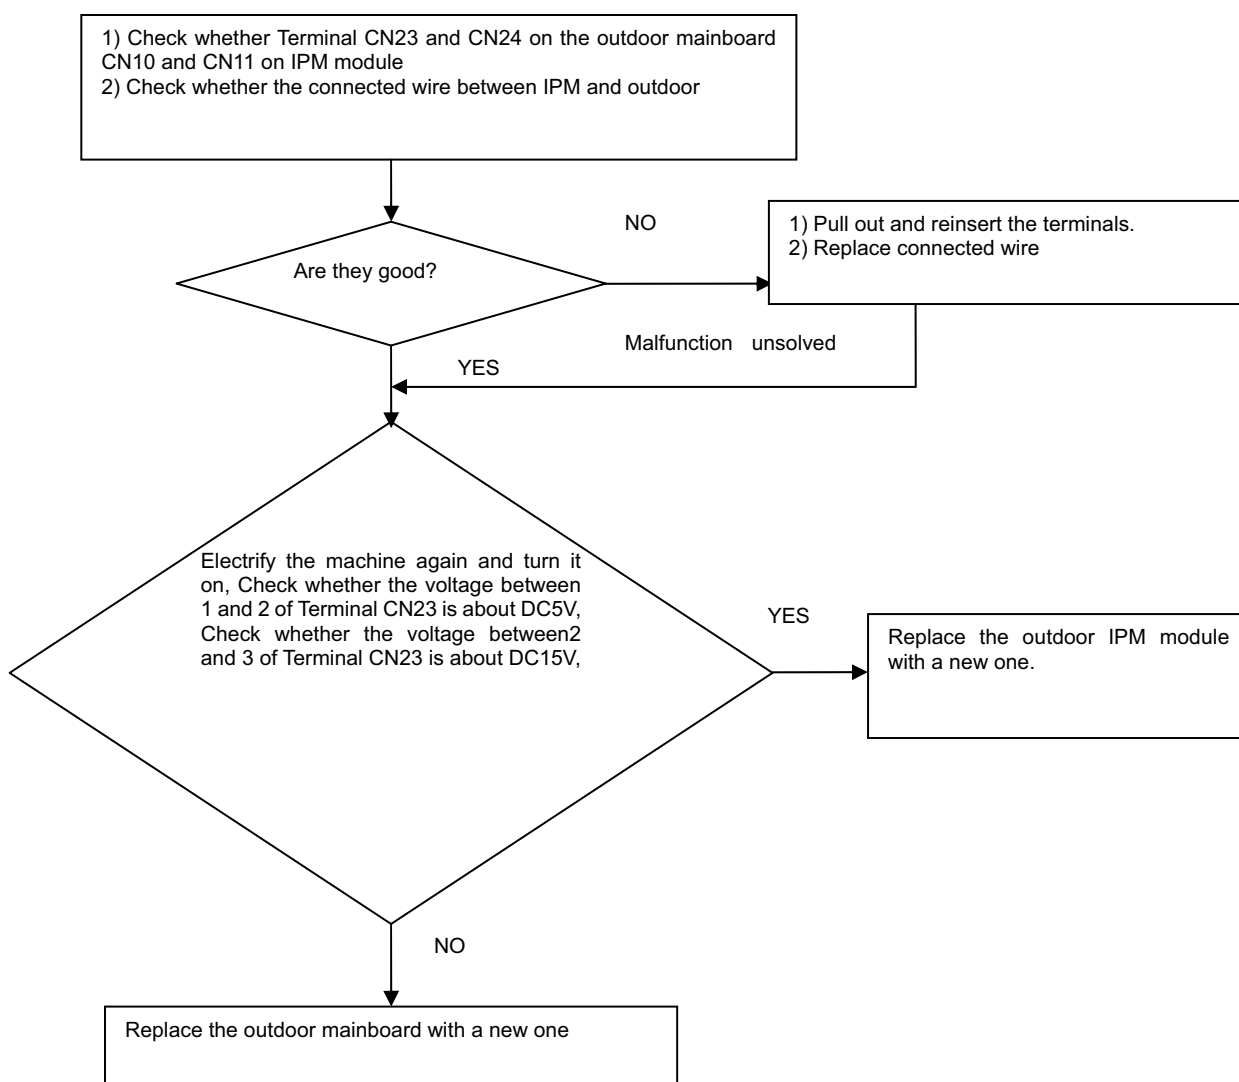

10.3.8 Power Supply Over or under voltage fault

Outdoor display: ■ ★ □ / F19 LED1 flash 6 times The power supply is over voltage

Method of Malfunction Detection

An abnormal voltage rise or fall is detected by checking the specified voltage detection circuit.

Malfunction Decision Conditions


An voltage signal is fed from the voltage detection circuit to the microcomputer

Supposed Causes

- Supply voltage not as specified
- the IPM module is broken
- the outdoor PCB is broken

Troubleshooting


* Caution Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

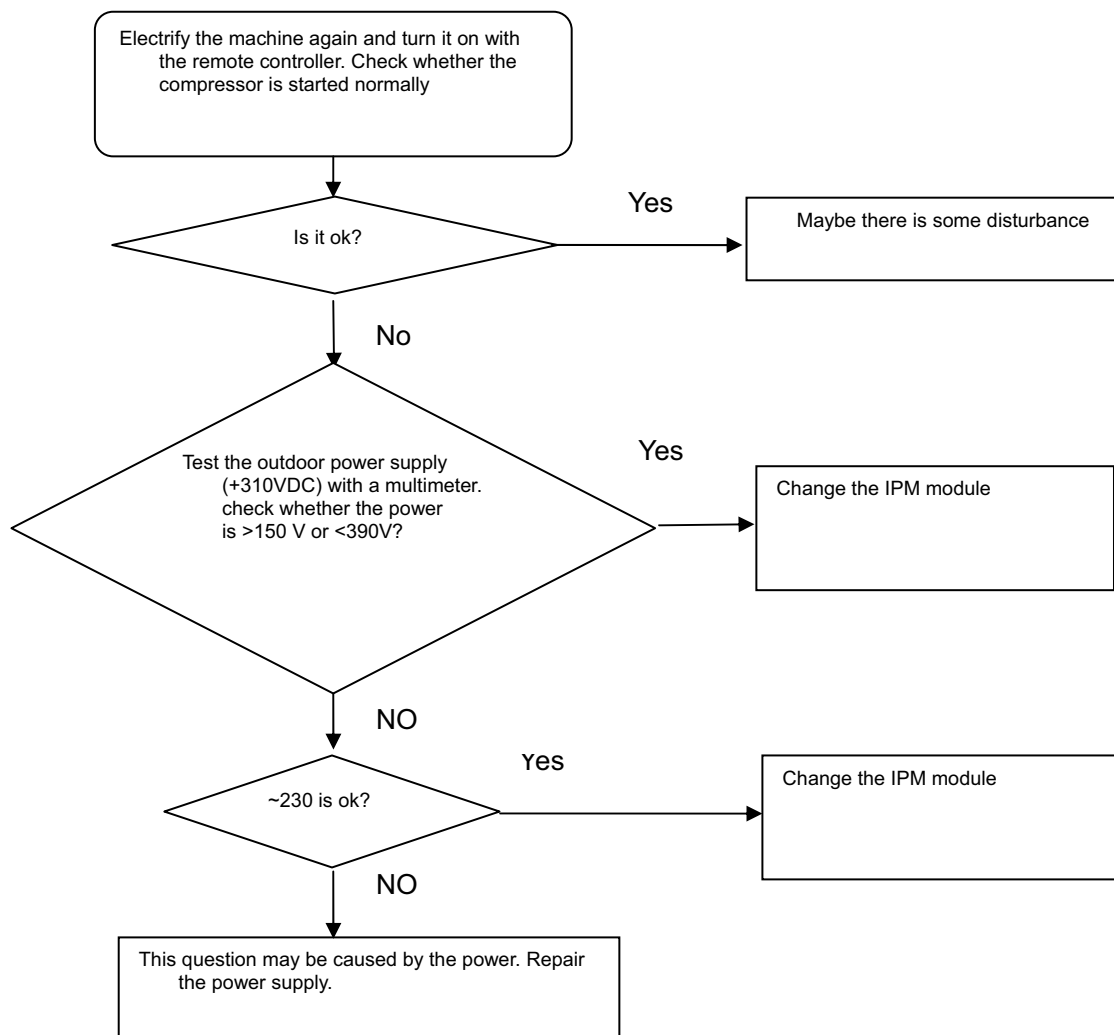

10.3.9 Overheat Protection For Discharge Temperature

Outdoor display: ■ ★ ■ / F04 LED1 flash 8 times

Method of Malfunction Detection	The Discharge temperature control is checked with the temperature being detected by the Discharge pipe thermistor
Malfunction Decision Conditions	when the compressor discharge temperature is above 110°C
Supposed Causes	<ul style="list-style-type: none"> ■ Electronic expansion valve defective ■ Faulty thermistor ■ Faulty PCB
Troubleshooting	* Caution Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

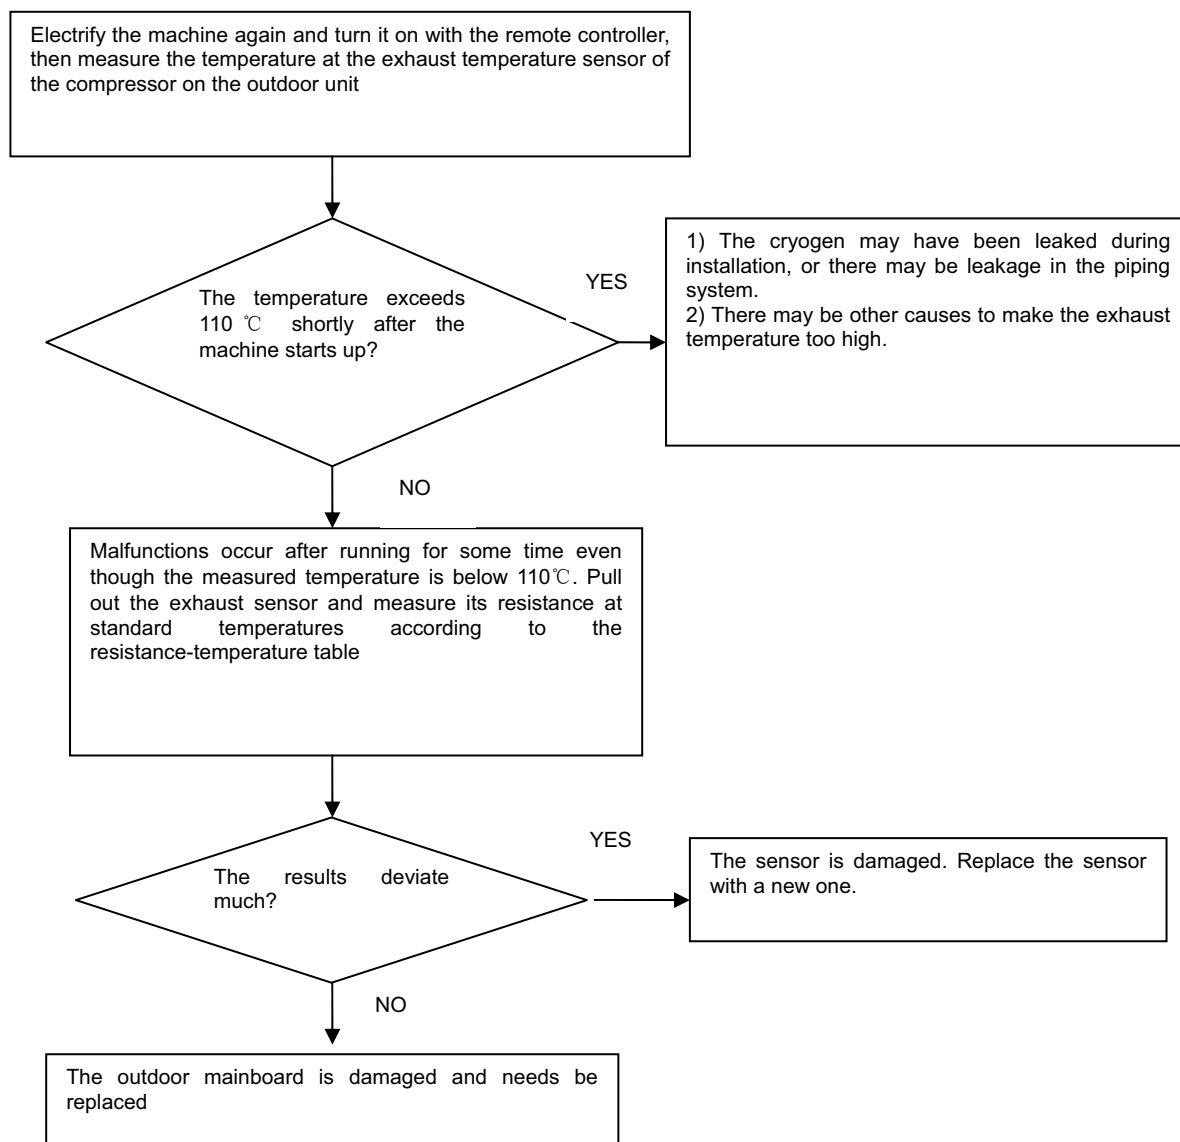

10.3.10 The communication fault between indoor and outdoor

Indoor display
outdoor display

■ ■ ★/ E07
LED1 flash 15 times

Method of
Malfunction
Detection

Communication is detected by checking the indoor PCB and the outdoor PCB.

Malfunction
Decision
Conditions


- The outdoor PCB broken leads to communication fault.
- The indoor PCB broken leads to communication fault.


Supposed
Causes

- Communication wiring disconnected.
- The indoor PCB is broken.
- The outdoor PCB is broken.
- The Module PCB is broken.

Troubleshooting

* Caution Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

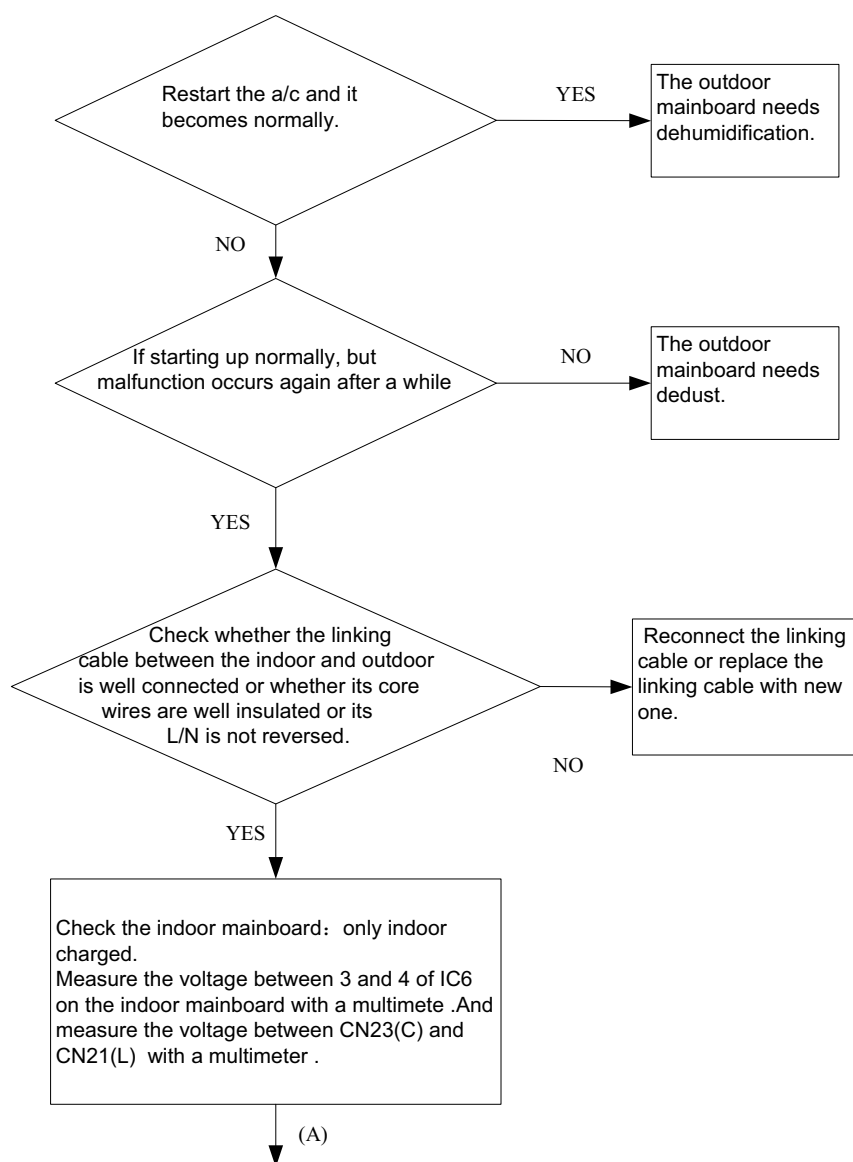

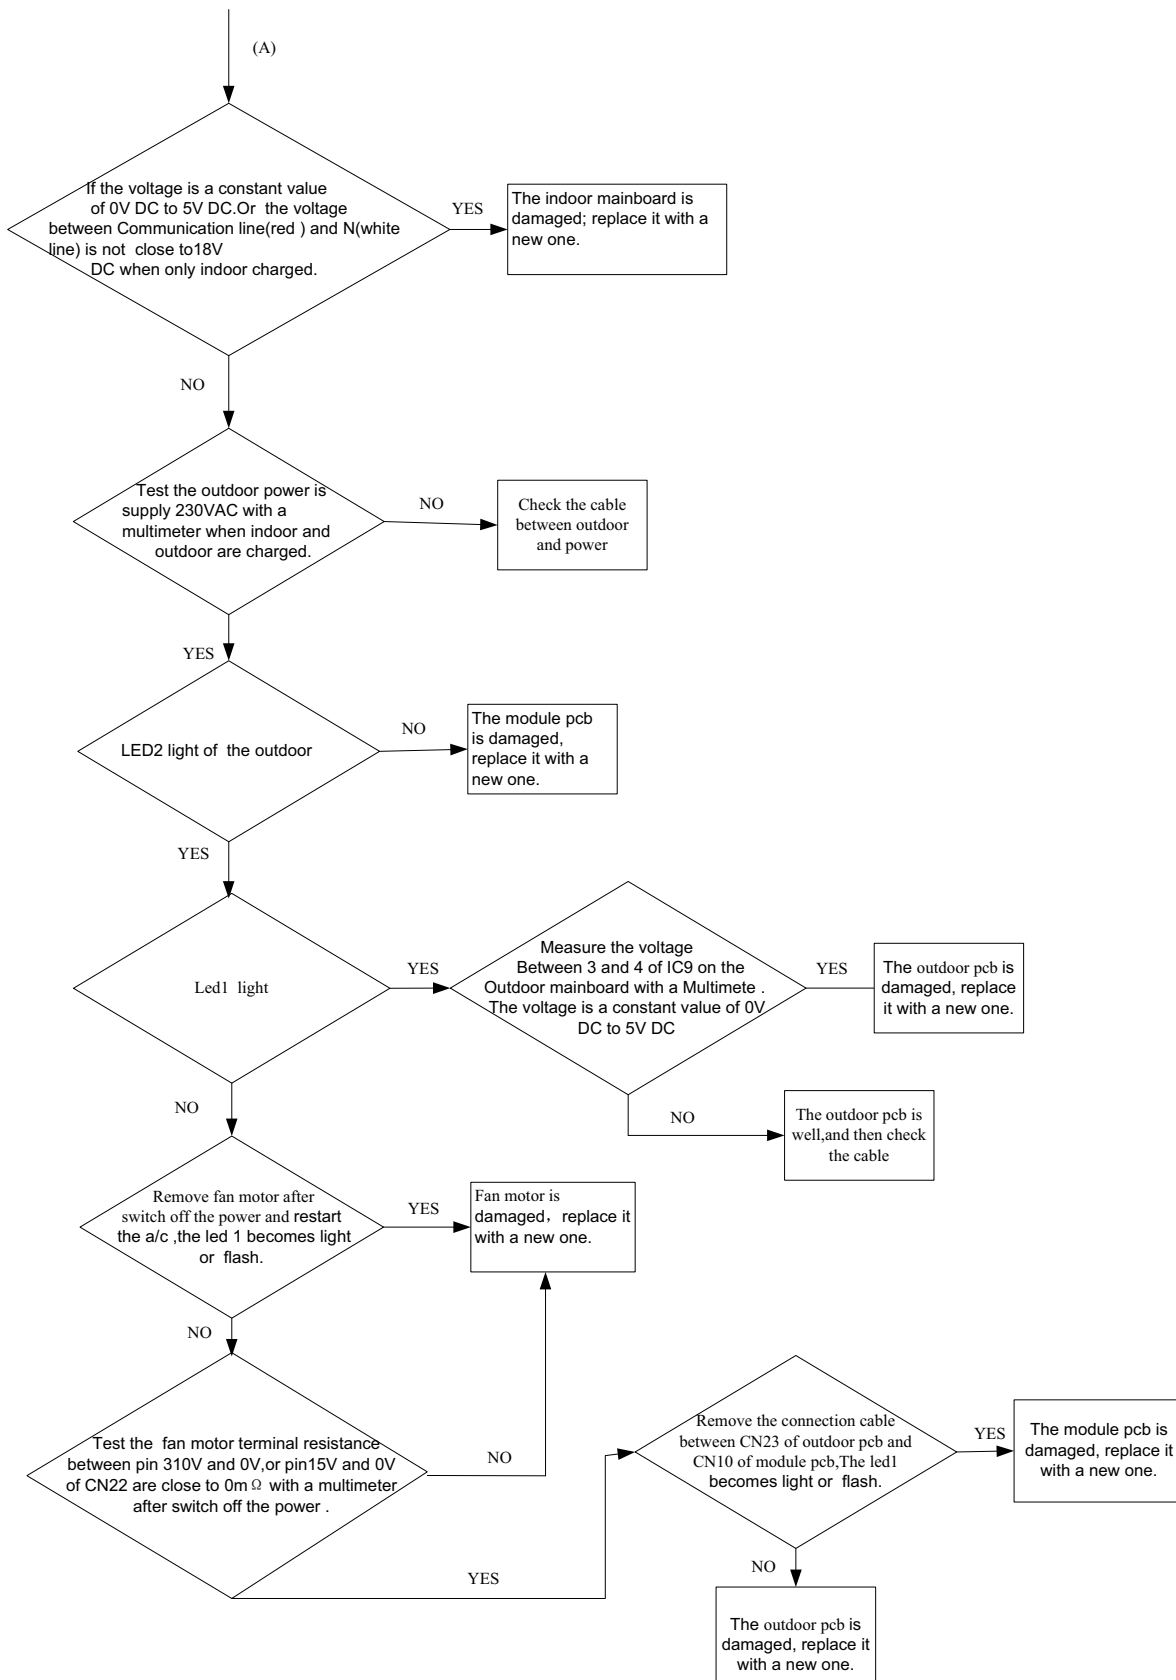

10.3.11 Loss of synchronism detection Inverter side current detection is abnormal

Outdoor Display ■ ★ ■ \ F11 LED1 flash 18 times
 ■ ★ ■ \ F28 LED1 flash 19 times


Method of Malfunction Detection The position of the compressor rotor can not detected normally

Malfunction Decision Conditions when the wiring of compressor is wrong or the connection is poor;
 or the compressor is damaged

Supposed Causes

- Faulty The wiring of compressor
- Faulty compressor
- Faulty PCB

Troubleshooting * Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

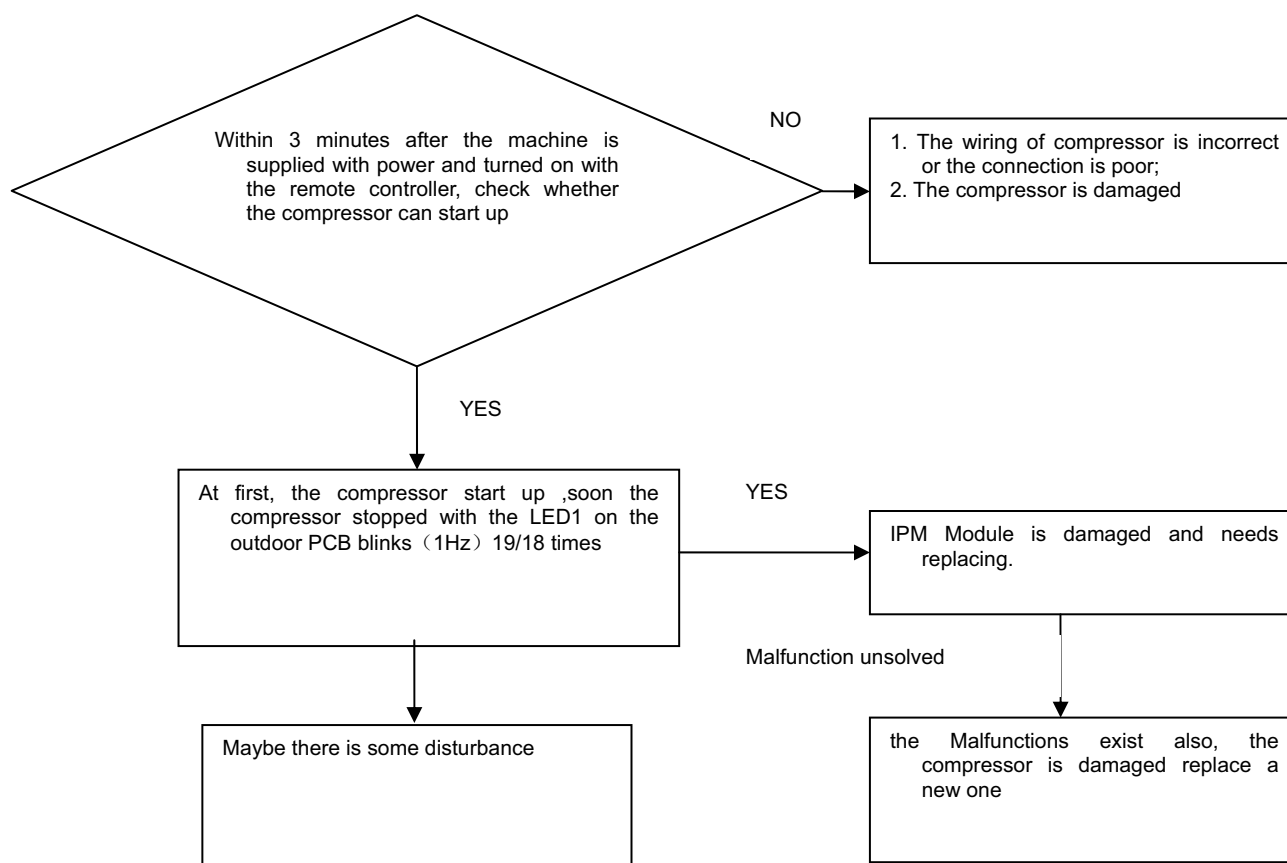

10.3.12 High work-intense protection


Outdoor display ★ ★ ★\E09 LED1 flash 21 times

Method of Malfunction Detection High work-intense control is activated in the heating mode if the temperature being sensed by the heat exchanger thermistor exceeds the limit.


Malfunction Decision Conditions Activated when the temperature being sensed by the heat exchanger rises above 65°C twice in 30 minutes.





- Supposed Causes**
- Faulty electronic expansion valve
 - Dirty heat exchanger
 - Faulty heat-exchange sensor
 - Insufficient gas

Troubleshooting * Caution Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

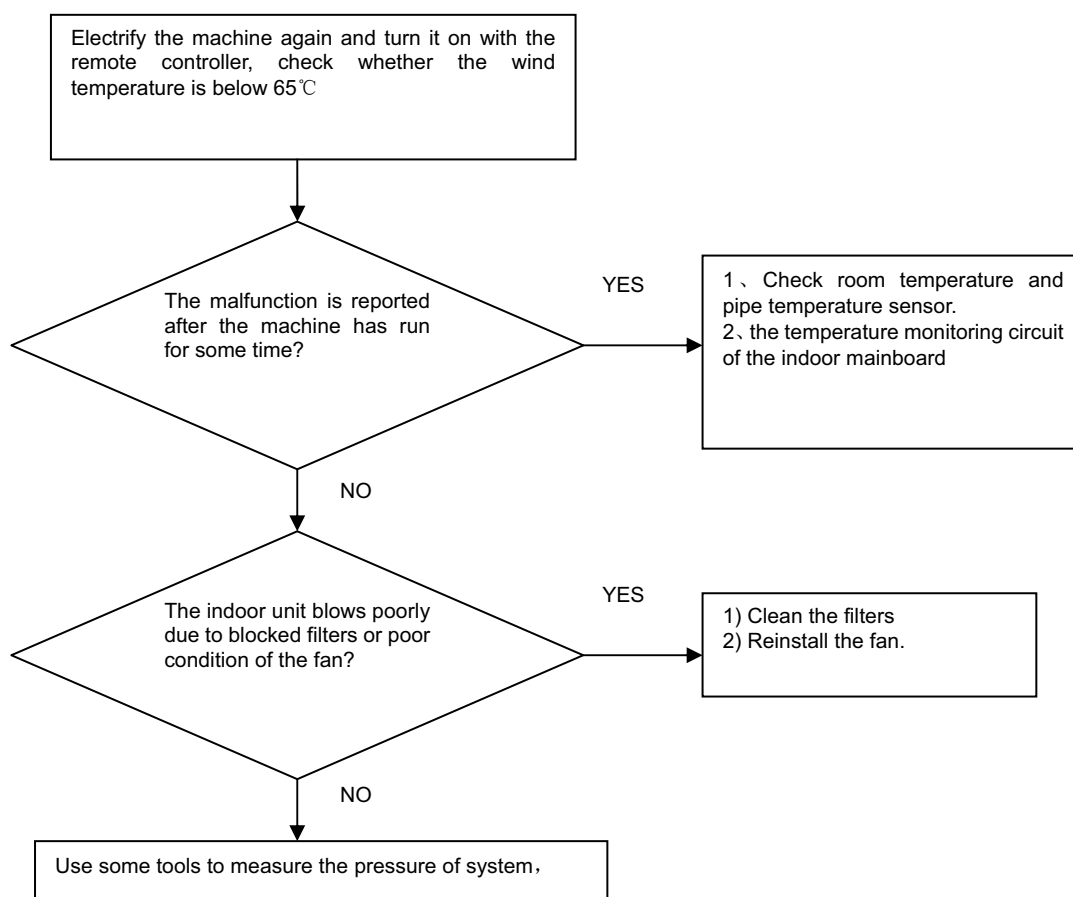

11. Circuit diagrams

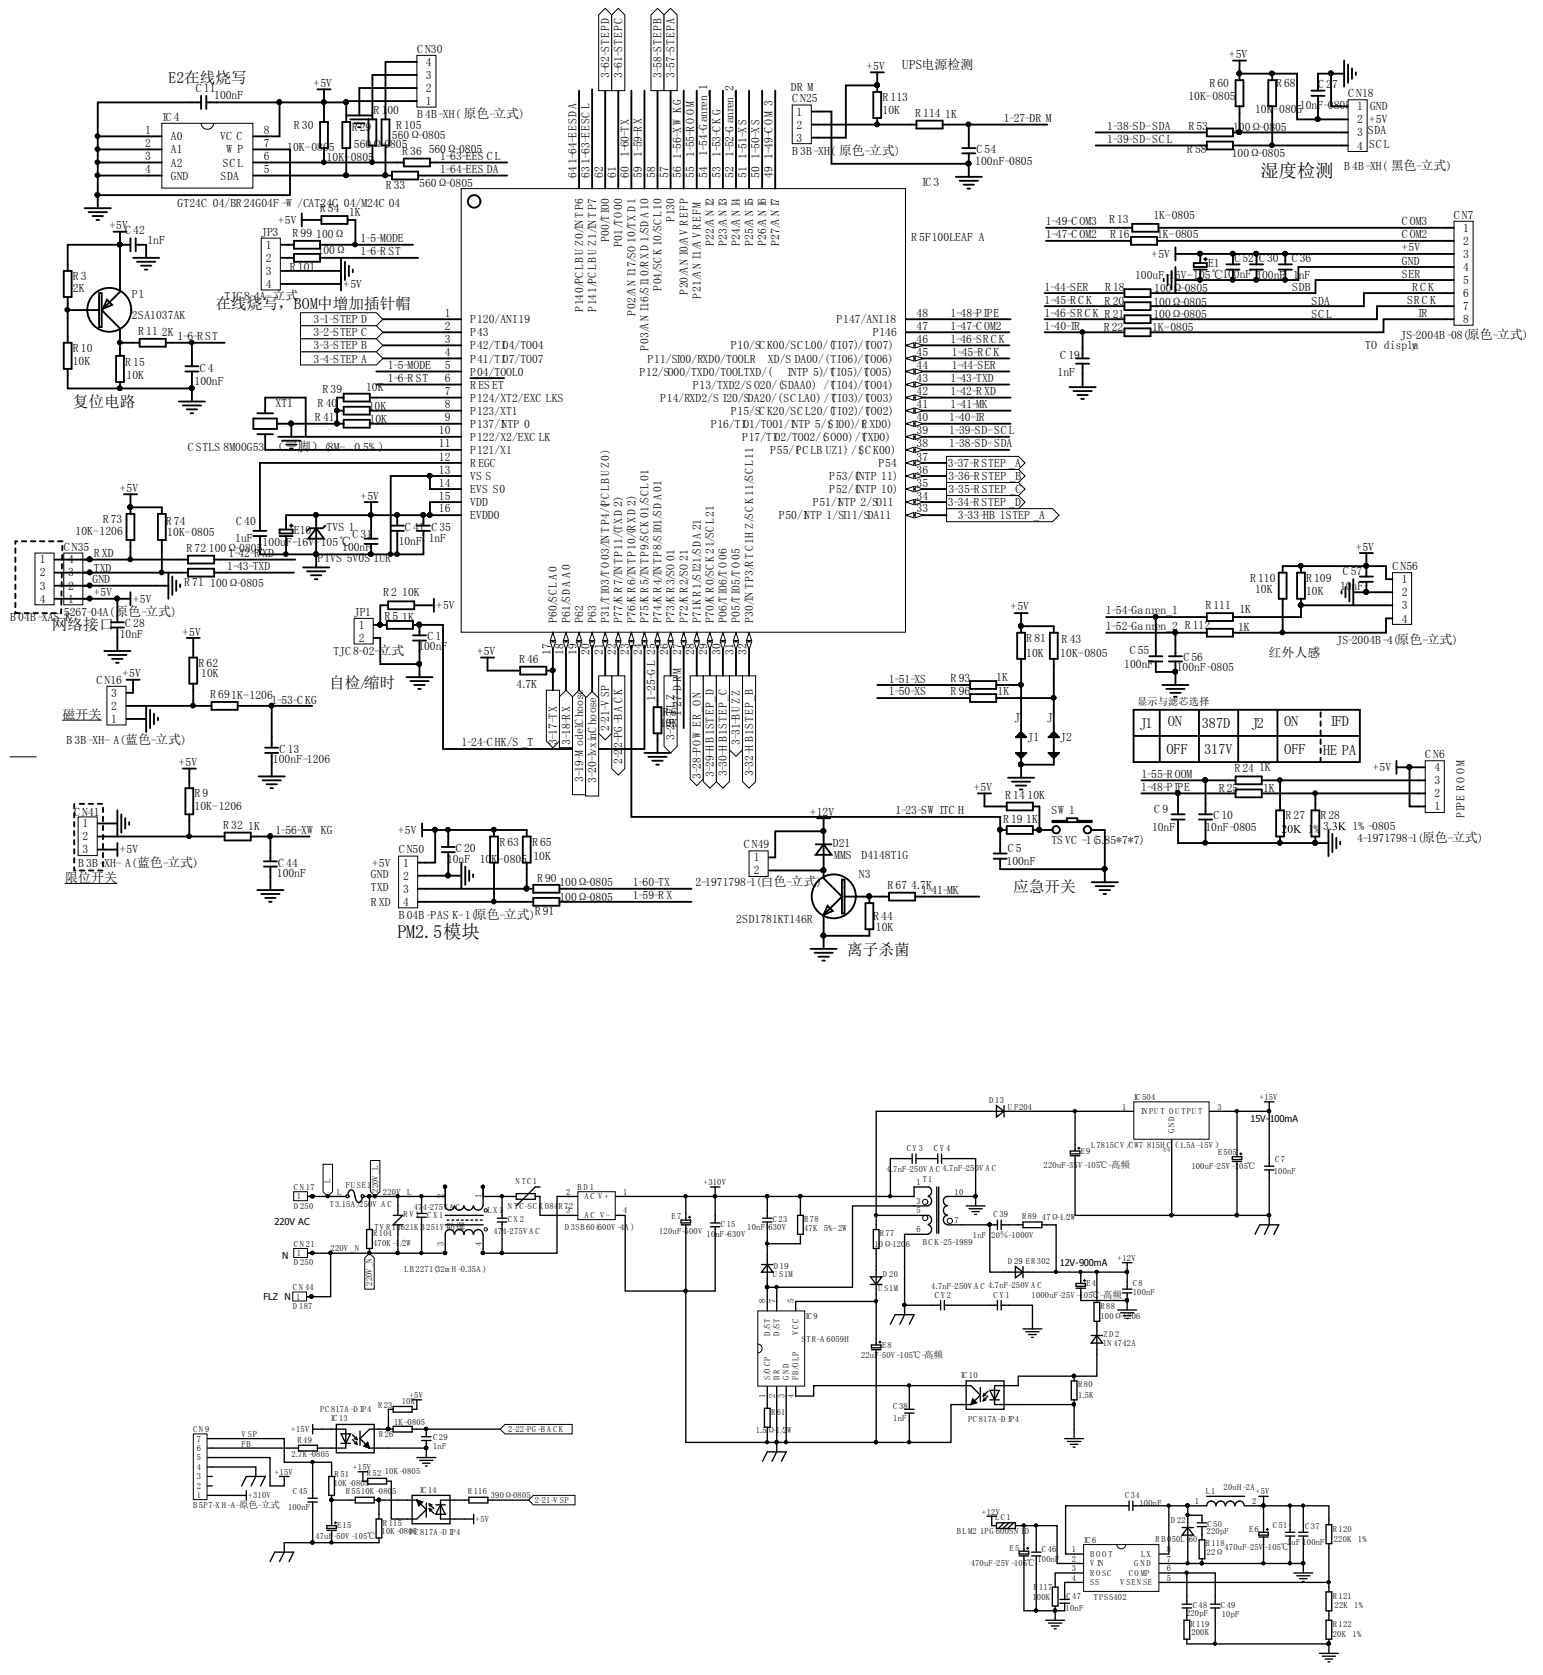

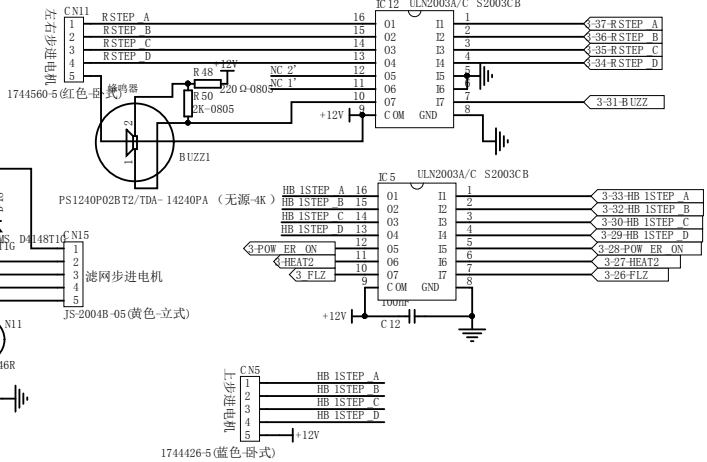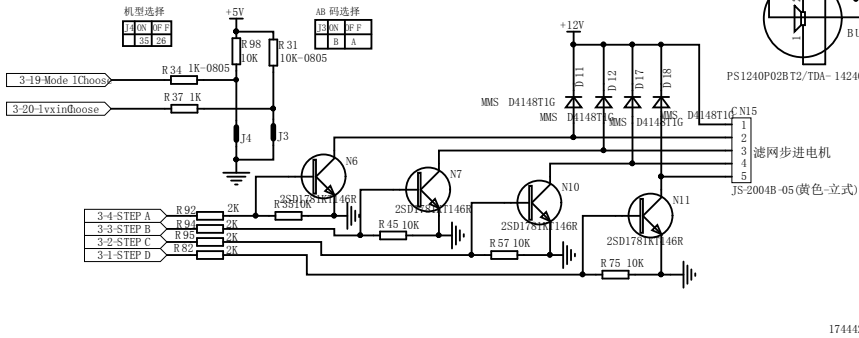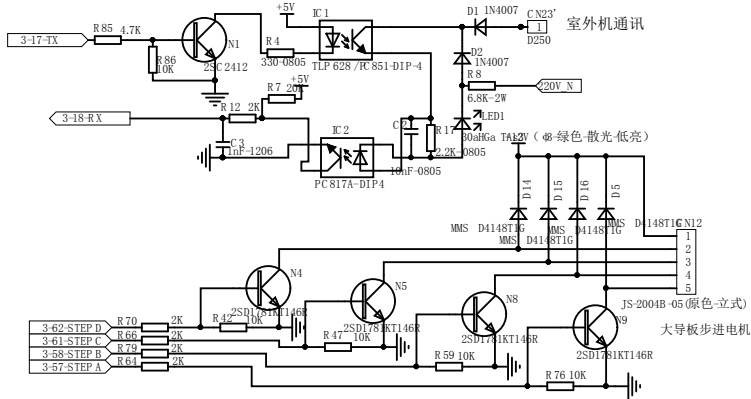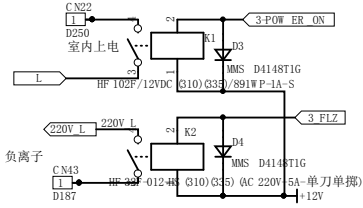

Sincere Forever

Haier Group

Haier Industrial Park, No.1, Haier Road

266101, Qingdao, China_

Http: //www.haier.com

Edited by : Wang fang

Yang Xiaodong

Signed by : Yang Wenjun

Approved by: Wu Hongjin



REMOVAL PROCEDURE

Wall Mounted Type AC Inverter FREE MATCH J-Series SERIES:35J





WARNING



This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or Repair the product or products dealt with in this service information by anyone else could result in serious injury or death

2020(Qingdao Haier Air Conditioner General corp. , Ltd)
All rights reserved. Unauthorized copying and distribution is a violation of law



Remove of front panel

Indoor unit


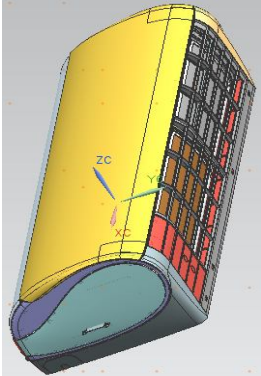
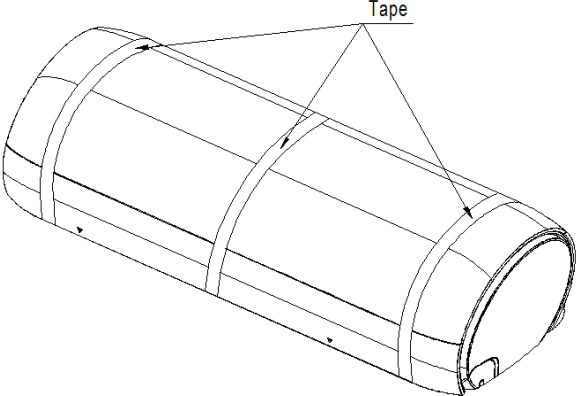
Step		Procedure	Points
1.Features			
			
2.Remove the front panel			
1	Release the three pieces of Cushion block		


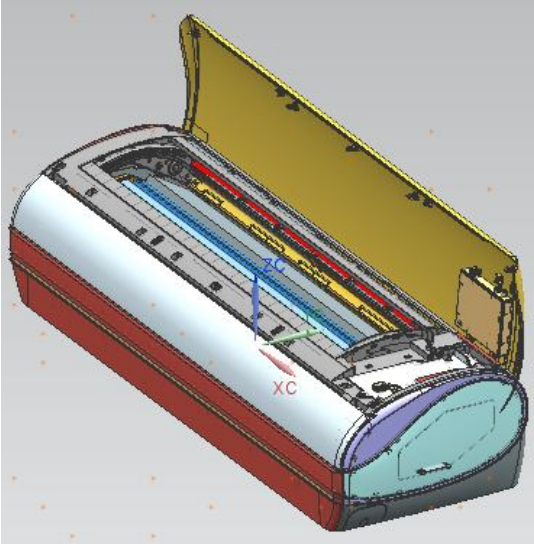
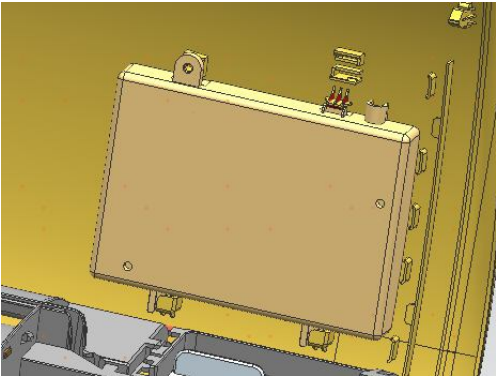
Step		Procedure	Points
2	Hold the bottom side of front panel and lift it		
3	Loosen one screw and release the display module and remove the front panel		

Remove the air filters and horizontal flap

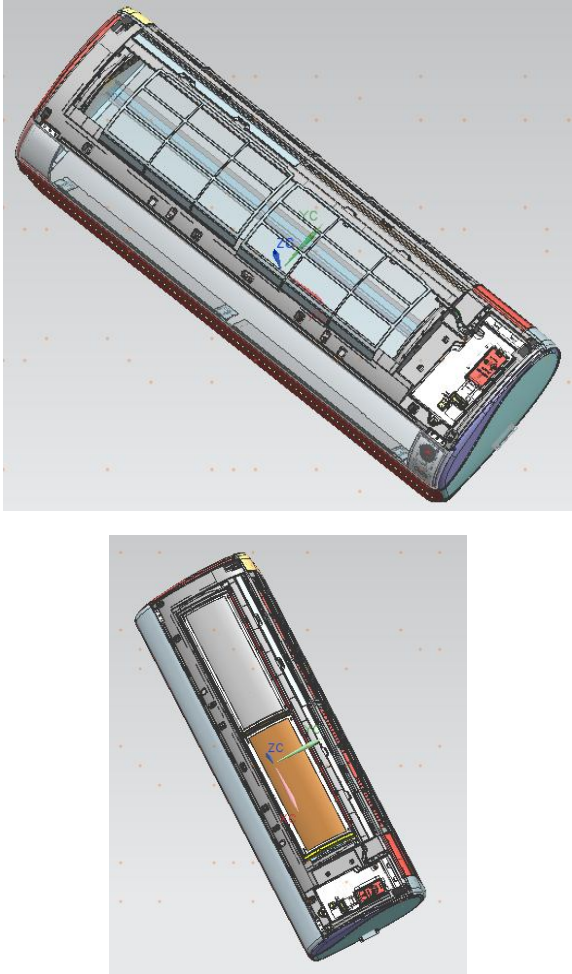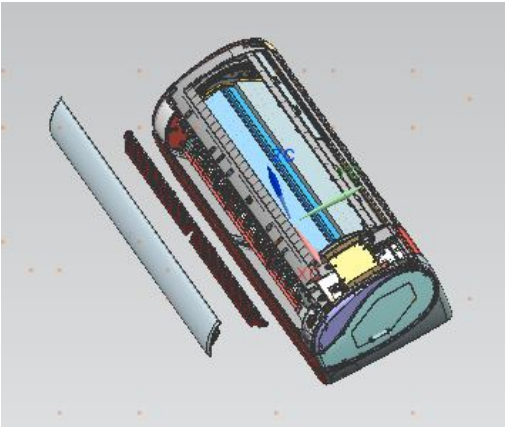
Step		Procedure	Points
1	Lift the right and left air filter upwards slightly and then pull it out downwards		
Remove the horizontal blade			
1	Release the horizontal blade slightly and remove it.		

Remove the casing

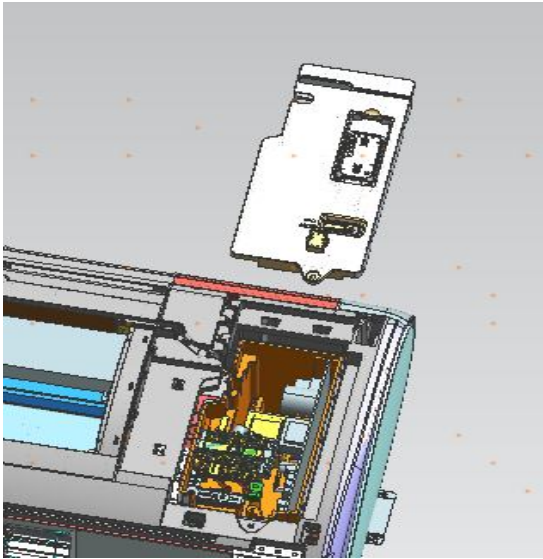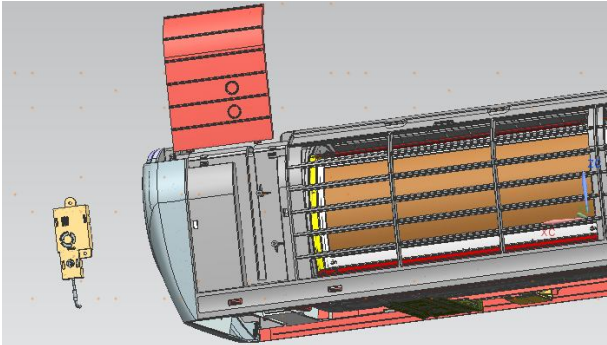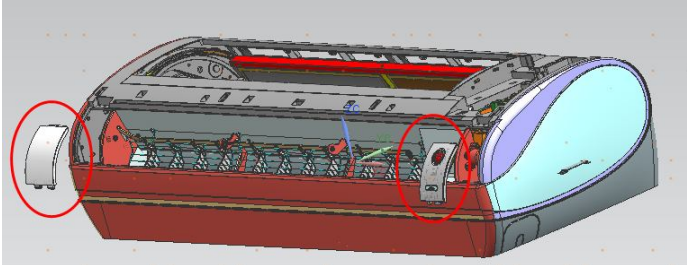
Step		Procedure	Points
1	Loosen one screw and remove the cover		
2	Loosen one screw and remove the cover		
3	Loosen screws and remove the cover		


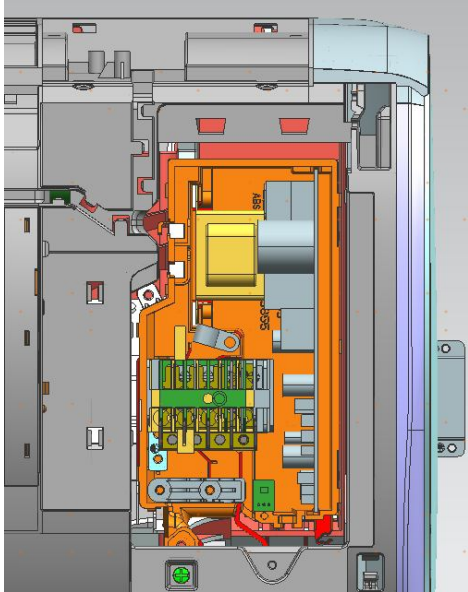
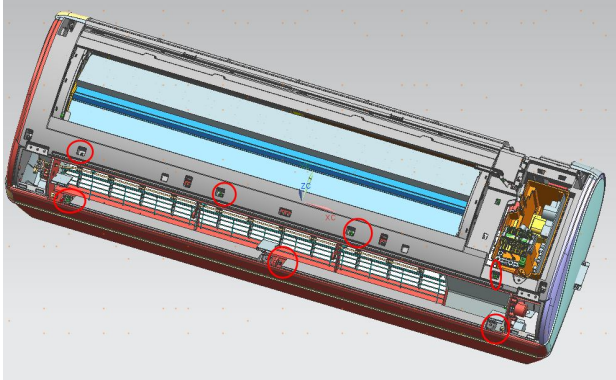
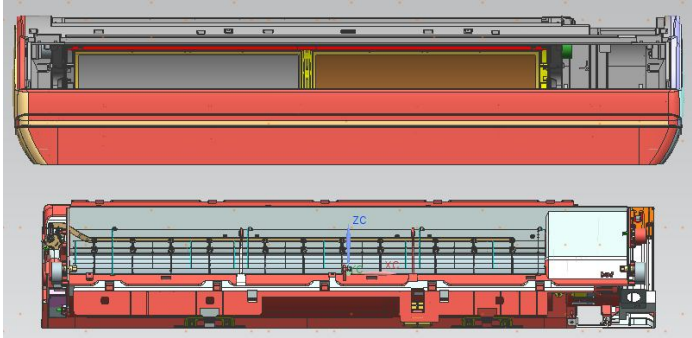
<p>4</p>	<p>Release connect terminals</p>		
<p>5</p>	<p>Lift up the three screw covers and then loosen the marked seven screws</p>		<p>■When assembling, install the front grille horizontally so as not to stuff the flap inside.</p> <p>■When assembling, make sure the four hooks are caught properly.</p>
<p>6</p>	<p>Release the marked hooks on the top side of unit and then pull the front grille out horizontally and remove it</p>		

Release stepping motor (2type)

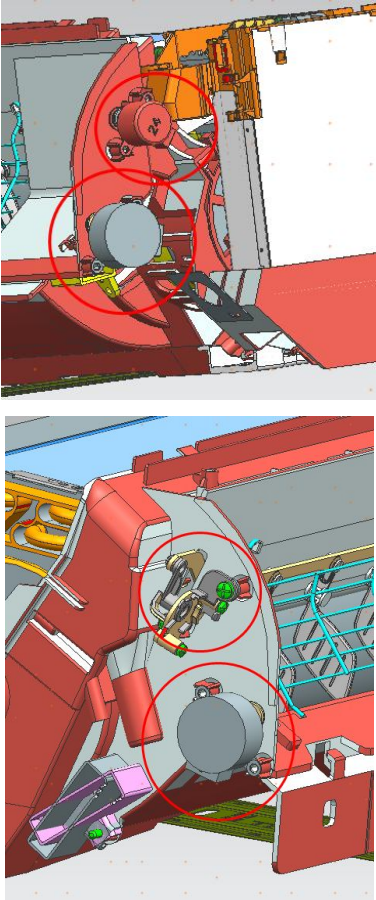Step		Procedure	Points
1	Loosen the stepping motor screws and then release the stepping motor.		

Removal of Control Box


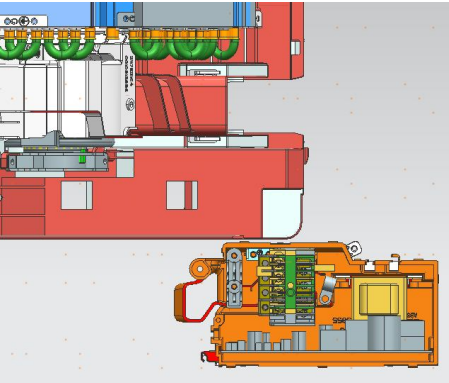
Step		Procedure	Points
1	Loosen the control Box screw and then pull it.		

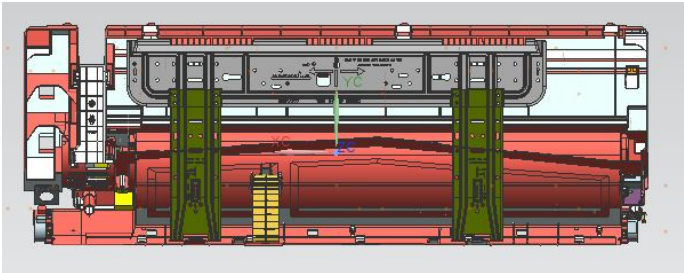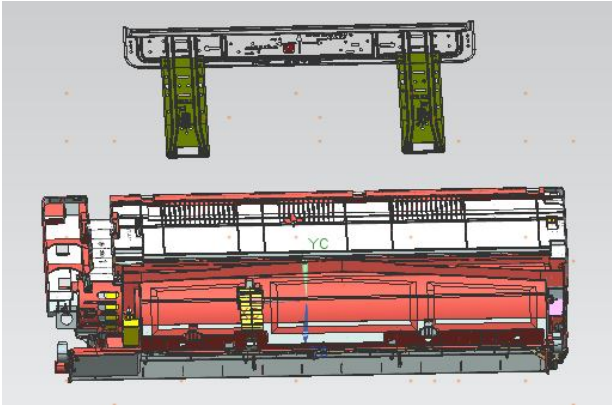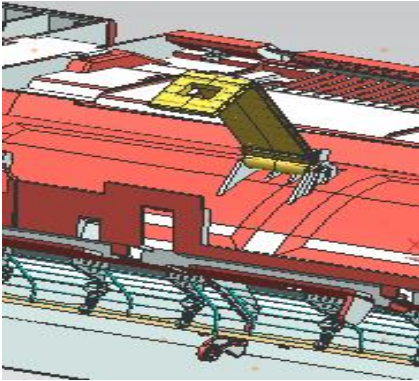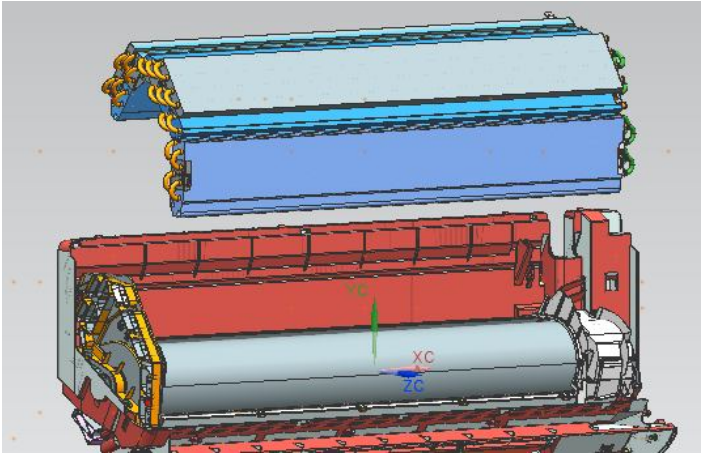Removal of Heat Exchanger			
1	Loosen the marked Screws.		
2	Pull mounting plate and heat exchanger bracket and then release them.		
3	Release the fixture plate from the base frame hook and rotate it		
4	Loosen the marked screws and remove the heat exchanger		

Remove Fan rotor and Fan


1

Loosen the marked screws(6EA) and release the cover and bracket of fan motor

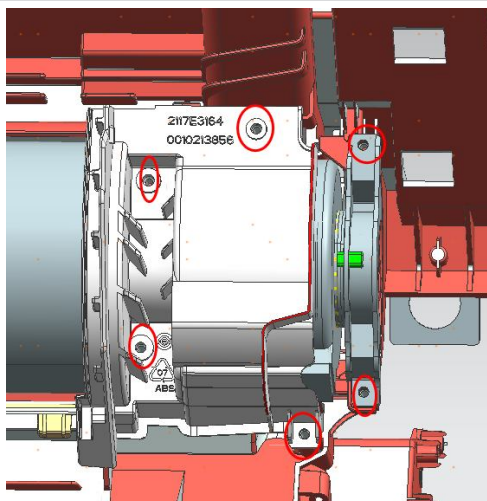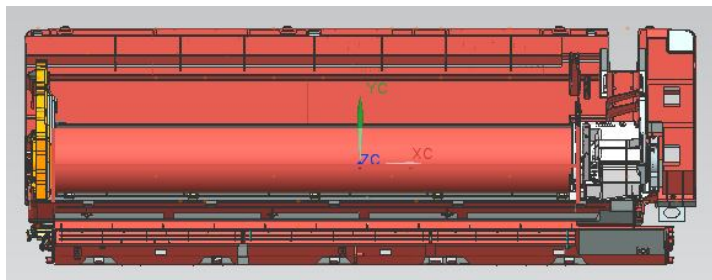

2

Loosen the marked screw (1EA) and remove fan motor and fan

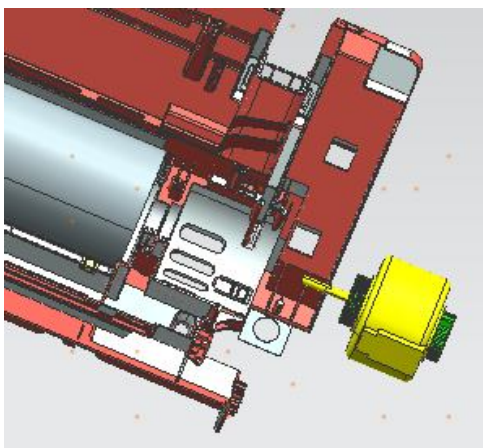

Removal of mechanism modules of front panel

Step		Procedure	Points
1	Loosen the marked screws and remove the mechanism modules of front panel	